Washing Machine

User manual

WA16J675***/WA15J675***/WA14J673***

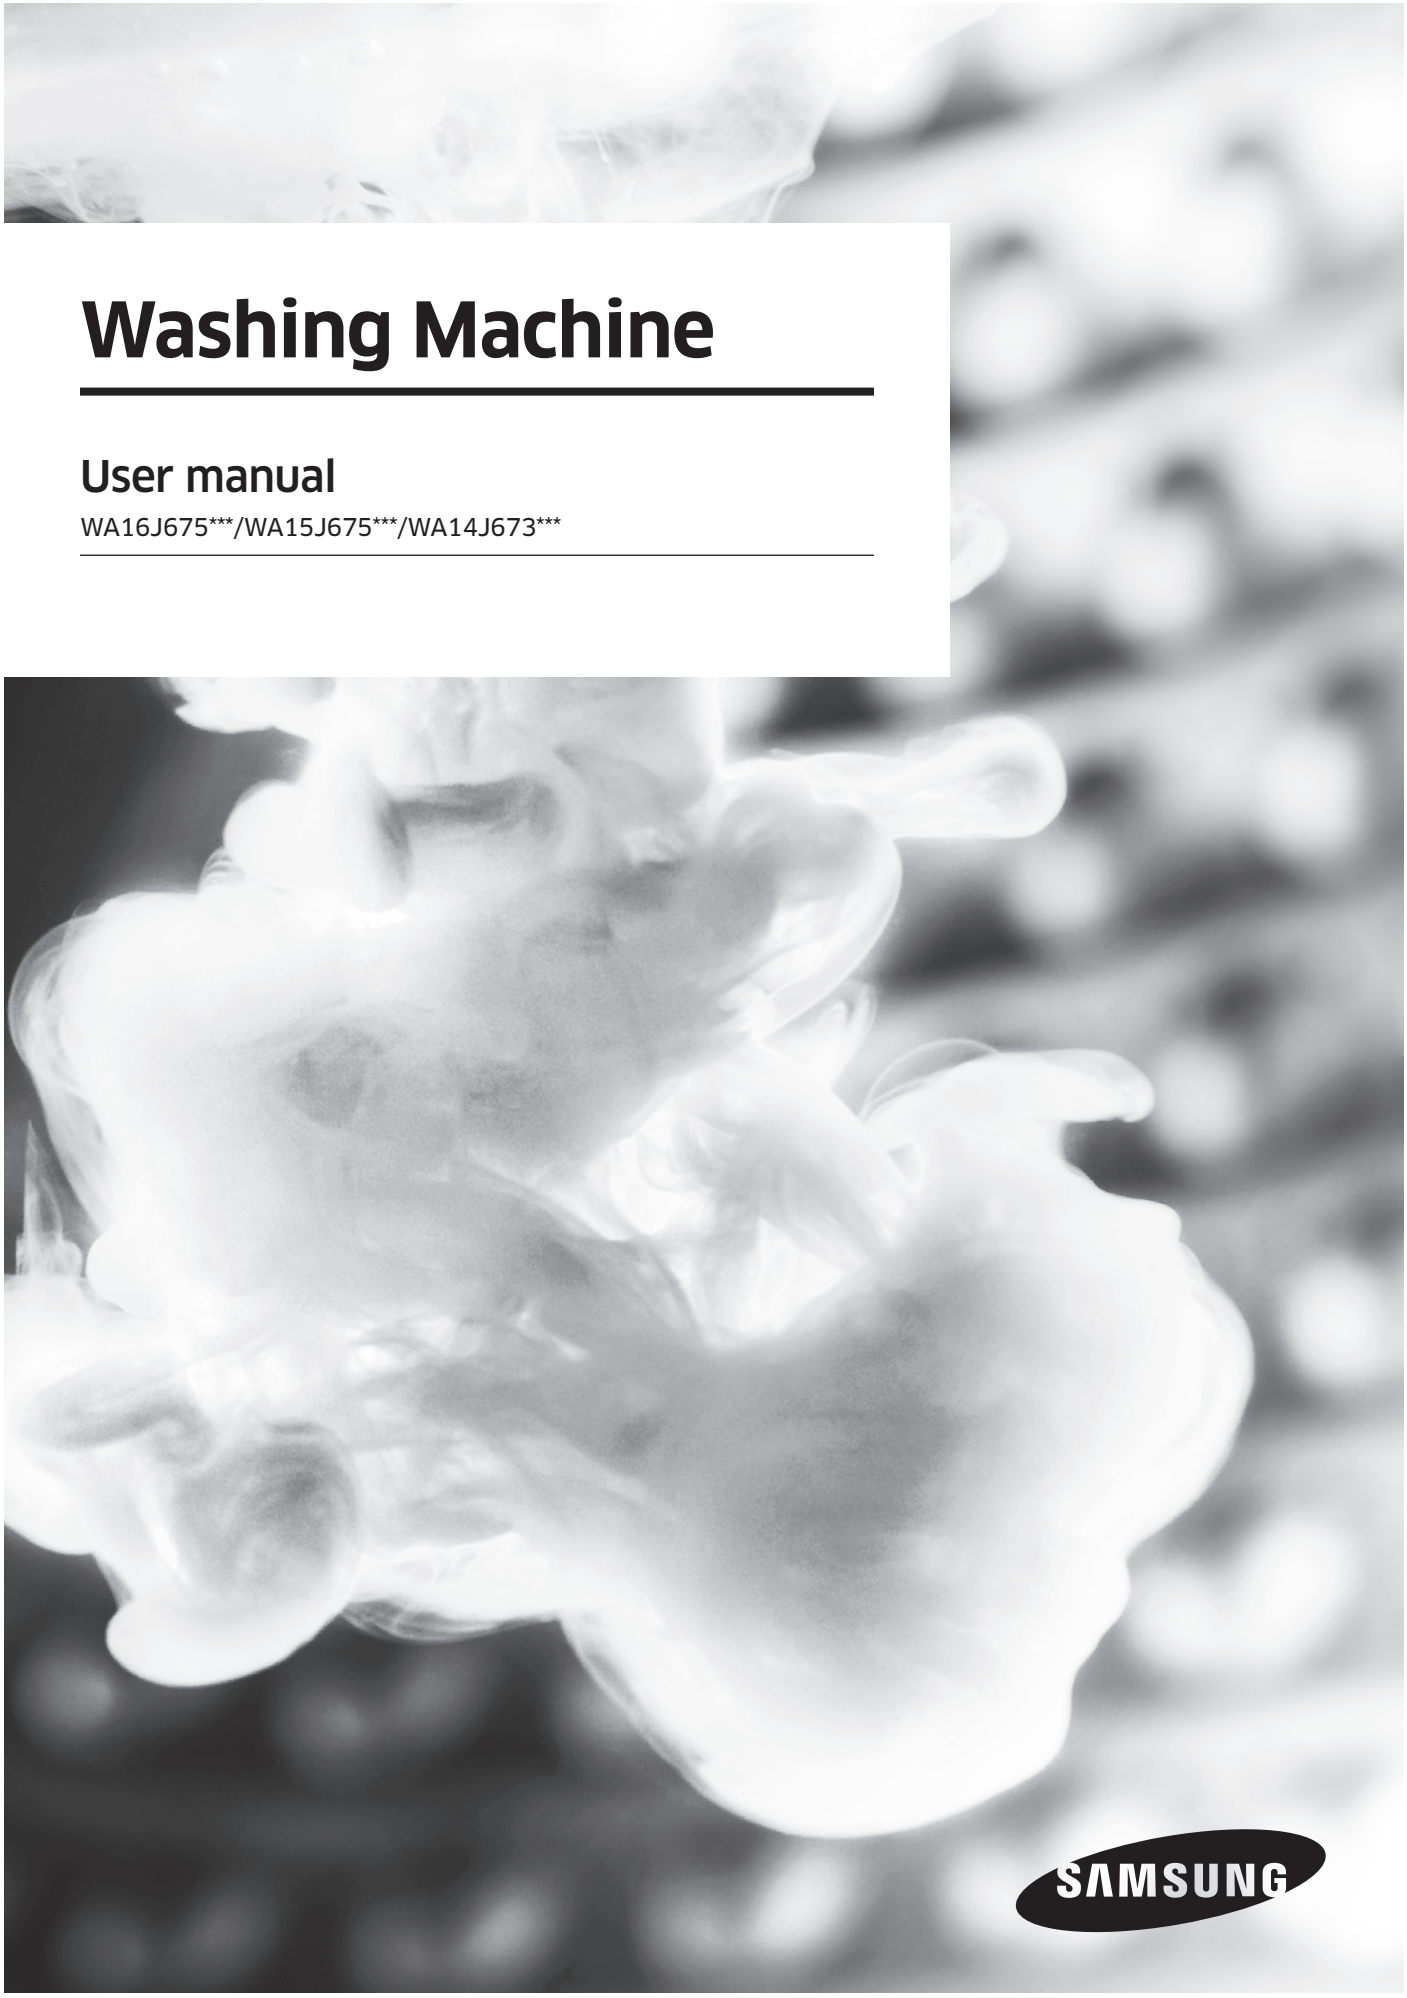

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 1 2015-01-20 오후 3:52:02

Contents

Safety information 3

What you need to know about the safety instructions 3
Important safety symbols 3
Important safety precautions 4

Installation 10

What's included 10
Installation requirements 12
Step-by-step installation 13

Before you start 20

The basics 20
Smart Check 22
Laundry guidelines 23

Operations 26

Control panel 26
Simple steps to start 28
Auto cycles 29
Manual cycles 30

Maintenance 31

Cleaning 31

Troubleshooting 35

Checkpoints 35
Information codes 39

Specifications 42

Specification sheet 42

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 2 2015-01-20 오후 3:52:02

Safety information

Congratulations on your new Samsung washing machine. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washing machine's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual.
Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine.
Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

⚠ WARNING

Hazards or unsafe practices that may result in severe personal injury, death and/or property damage.

⚠ CAUTION

Hazards or unsafe practices that may result in personal injury and/or property damage.

NOTE

Indicates that a risk of personal injury or material damage exists.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 3 2015-01-20 오후 3:52:02

Safety information

These warning signs are here to prevent injury to yourself and others.
Please follow them explicitly.
After reading this manual, store it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

Important safety precautions

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 4 2015-01-20 오후 3:52:03

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

⚠ CAUTION

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

⚠ CAUTION

Do not use the water to exceed 50 °C when using the hot water in your washing machine.
Plastic parts may be deformed or damaged, and this may result in electric shock or fire.

Critical installation warnings

⚠ WARNING

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 5 2015-01-20 오후 3:52:03

Safety information

Plug the power cord into a wall socket that meets local electrical specifications. Use the socket for this appliance only, and do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency, and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.
- Plug the power plug into the wall socket so that the cord is running towards the floor. If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national regulations.

Do not install this appliance near a heater or any inflammable material.
Do not install this appliance in a humid, oily or dusty location, or in a location exposed to direct sunlight or water (rain drops).

Do not install this appliance in a location exposed to low temperatures.

- Frost may cause the tubes to burst.

Do not use an electric transformer.

- This may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord, or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.
Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 6 2015-01-20 오후 3:52:03

Installation cautions

⚠ CAUTION

This appliance should be positioned in such a way that the power plug is easily accessible.
- Failure to do so may result in electric shock or fire due to electric leakage.

Critical usage warnings

⚠ WARNING

If the appliance is flooded, turn off the water & power supplies immediately and contact your nearest service centre.
- Do not touch the power plug with wet hands.
- Failure to do so may result in electric shock.

If the appliance generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest Samsung Customer Service.
- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.
- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washing machine. In addition, when disposing of the appliance, remove the lid.
- If trapped inside the product, children may suffocate to death.

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive substances.
- This may result in electric shock, fire, or an explosion.

Do not touch the power plug with wet hands.
- This may result in electric shock.

Do not insert your hand or a metal object under the washing machine while an operation is in progress.
- This may result in injury.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 7 2015-01-20 오후 3:52:03

Safety information

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.
- When the appliance needs to be repaired or reinstalled, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.
- In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from doing it.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder or lightning storm.

- Failure to do so may result in electric shock or fire.

Do not put your hand into the spinning tub during the spin cycle.

- This may result in injury. If the tub does not stop spinning within 15 seconds after you open the lid, contact your nearest Samsung Customer Service.

Usage cautions

⚠ CAUTION

When the washing machine is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washing machine using a damp, soft cloth.

- Failure to do so may result in discolouration, deformation, damage, or rust.

The product you have purchased is designed for domestic use only.
Using the product for business purposes qualifies as a product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

Do not stand on the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.

- This may result in electric shock or injury.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 8 2015-01-20 오후 3:52:03

Critical cleaning warnings

⚠ WARNING

Do not clean the appliance by spraying water directly onto it.

Do not use the strong acidic cleaning agent.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 9 2015-01-20 오후 3:52:04

Installation

Follow these instructions carefully to ensure proper installation of the washing machine and to prevent accidents when doing laundry.

What's included

Make sure all the parts are included in the product package. If you have a problem with the washing machine or the parts, contact a local Samsung customer centre or the retailer.

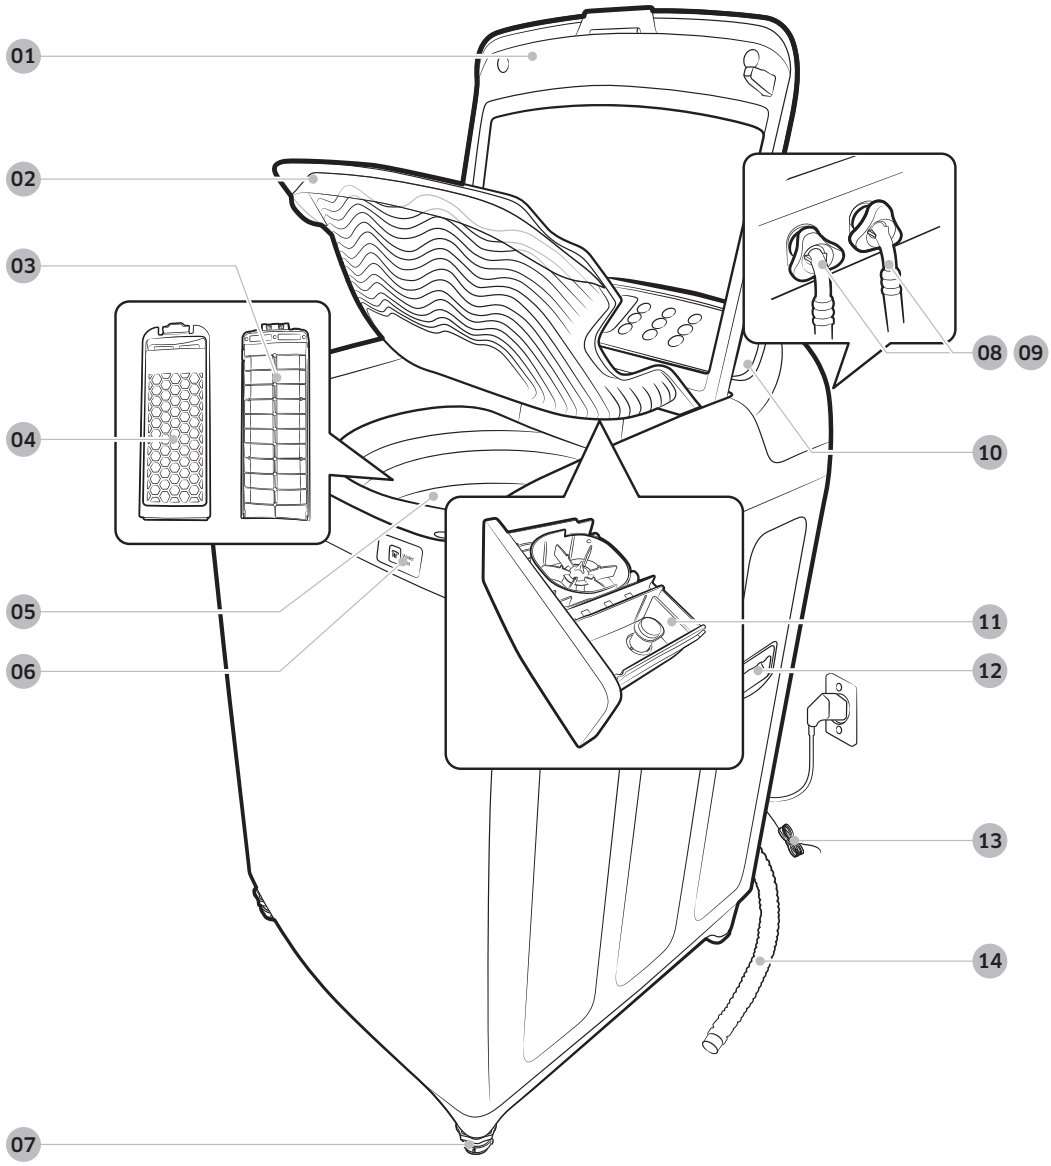

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 10 2015-01-20 오후 3:52:04

01 Door
02 Built-in sink
03 Lint filter (Rear)
04 Lint filter (Front)
05 Tub
06 Water Jet
07 Levelling feet
08 Water hose (Cold)
09 Water hose (Hot) *
10 Control panel
11 Detergent drawer
12 Side handle *
13 Grounding lead *
14 Drain hose

NOTE

- Availability of parts with an asterisk (*) depends on the model.
- Door: Make sure to keep the door closed while the washing machine is operating.
- Lint filter: This collects lint that builds up from the laundry being washed.
- Grounding lead: Cover this lead if wired to a metal part for earth-grounding.
- Levelling feet: Adjust the feet to level the washing machine on a flat floor.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 11 2015-01-20 오후 3:52:04

Installation

Installation requirements

Electrical supply and grounding

⚠ WARNING

- AC 220 V / 50 Hz fuse or circuit breaker is required.
- Use an individual branch circuit specific to the washing machine.
- Do NOT use an extension cord.
- Use only the power cord that comes with the washing machine.
- Do NOT connect the ground wire to plastic plumbing, gas lines, or hot water pipes.

Levelling

- To prevent tumbling or noise, install the washing machine on a solid, flat floor without a platform or bricks.
- Keep the washing machine at 10 cm from each adjacent wall.

Water supply

- Make sure water taps are easily accessible.
- Turn off the taps when the washing machine is not in use.
- Check for any leaks at the water hose fittings on a regular basis.

Drain

- Make sure the drain hose is not clogged.
- We recommend a standpipe in height of 90-100 cm. The drain hose must be connected through the hose clip to the standpipe, and the standpipe must fully cover the drain hose.
  The standpipe specifications mentioned here are only applicable to pump-type models.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 12 2015-01-20 오후 3:52:04

Step-by-step installation

STEP 1 Select a location

Location requirements:

- Solid, level surface without carpeting or flooring that may obstruct ventilation
- Away from direct sunlight
- Adequate room for ventilation and wiring
- The ambient temperature is always higher than the freezing point (0 ˚C)
- Away from a heat source

Anti-rat panel

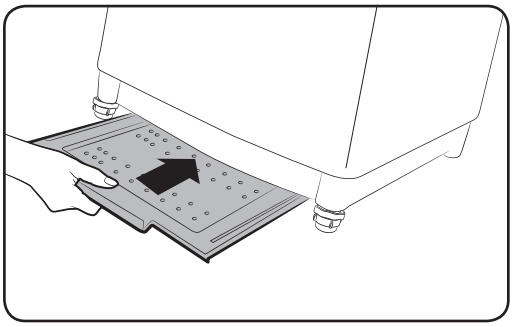

The washing machine comes with the Anti-rat panel that protects small animals such as rats from entering the machine.
Insert the panel into the bottom of the machine. To facilitate the work, slightly lift up the bottom front.

NOTE

- Some models feature the Anti-rat panel that must be inserted from the rear bottom of the model. For this model, insert the Anti-rat panel before levelling the machine. To facilitate the work, slightly lift up the bottom rear.
- Availability of the Anti-rat panel depends on the model.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 13 2015-01-20 오후 3:52:05

Installation

STEP 2 Adjust the levelling feet

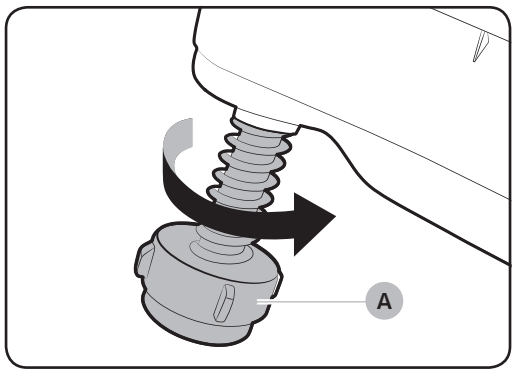

Unpack the product package.

1. Gently slide the washing machine into position. Excessive force may damage the levelling feet (A).
2. Level the washing machine by manually adjusting the levelling feet.

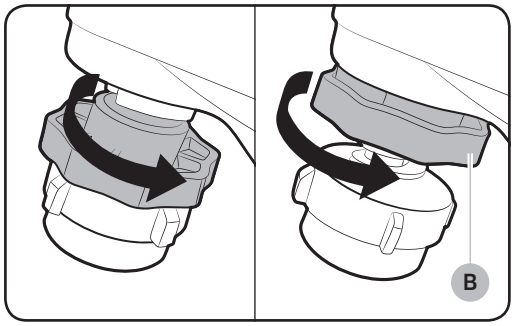

3. When levelling is complete, tighten the nuts (B) if provided (some models may not have the nuts).

⚠ WARNING

Packaging materials can be dangerous to children. Dispose all packaging material (plastic bags, polystyrene, etc.) out of children's reach.

STEP 3 Connect the water hose

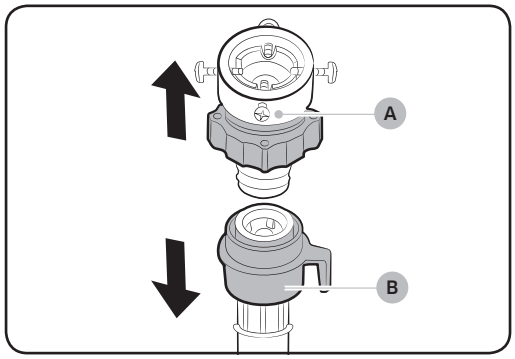

Connect the water hose to the water tap.

1. Remove the adaptor (A) from the water hose (B).

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 14 2015-01-20 오후 3:52:05

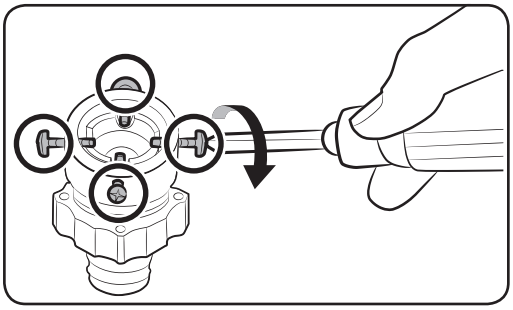

2. Use a Philips screwdriver to loosen four screws on the adaptor.

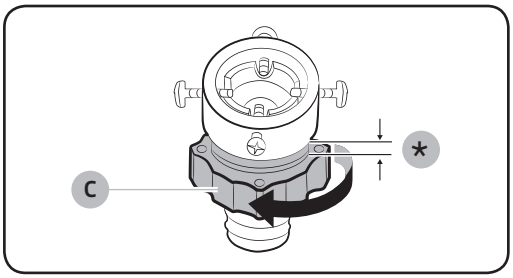

3. Hold the adaptor and turn **part (C)** in the arrow direction to loosen it by 5 mm (*).

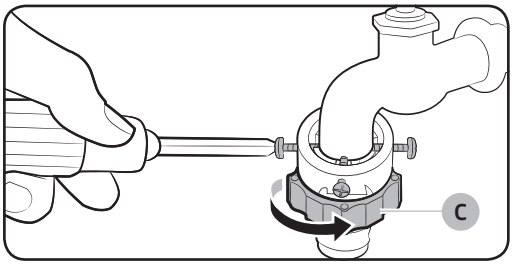

4. Insert the adaptor into the water tap, and tighten the screws while lifting up the adaptor.

5. Turn **part (C)** in the arrow direction to tighten it.

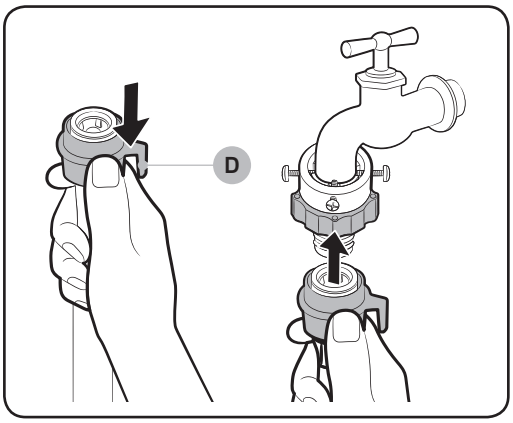

6. While holding down **part (D)**, connect the water hose to the adaptor. Then, release **part (D)**. The hose fits into the adaptor with a clicking sound.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 15 2015-01-20 오후 3:52:06

Installation

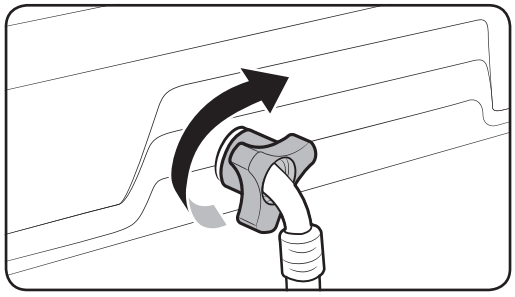

7. Connect the other end of the water hose to the inlet valve on the back of the washing machine. Turn the hose clockwise to tighten.

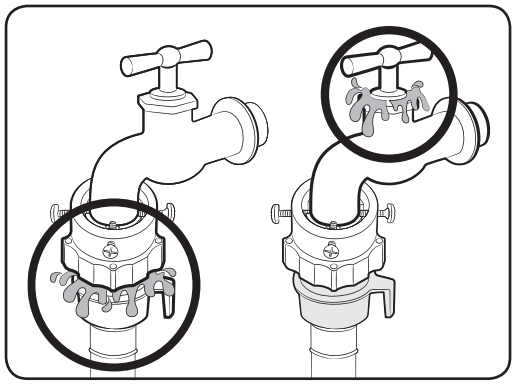

8. Open the water tap and check if there are any leaks around the connection areas.

- If there are water leaks, repeat the steps above.

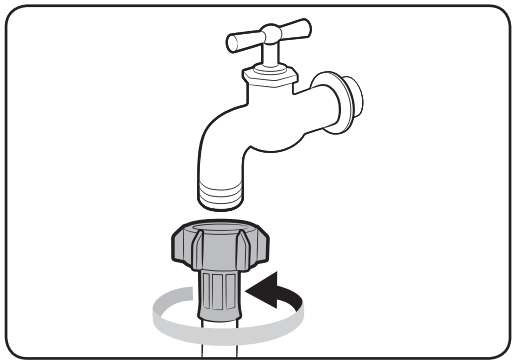

- If using a screw type of water tap, connect the water hose to the water tap as shown.

⚠ WARNING

Stop using the washing machine if there is a water leak, and contact a local Samsung service centre. Otherwise, this may cause electric shock.

⚠ CAUTION

Do not stretch the water hose by force. If the hose is too short, replace the hose with a longer, high-pressure hose.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 16 2015-01-20 오후 3:52:07

NOTE

- After connecting the water hose to the adaptor, check if it is connected properly by pulling the water hose downwards.
- Use a standard type of water tap. If the tap is square-shaped or too big, remove the spacer ring before inserting the tap into the adaptor.

STEP 4 Position the drain hose

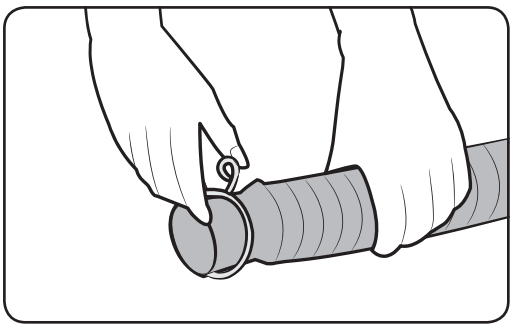

General type

1. Press and hold down the joint ring, and insert it into the drain hose.

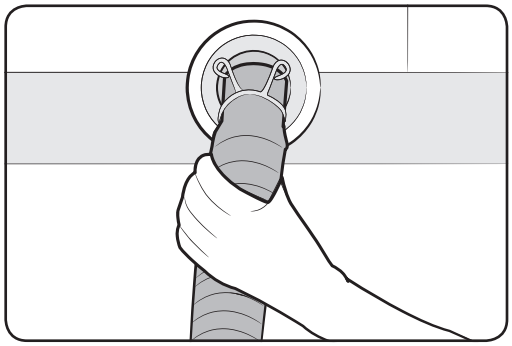

2. Insert the drain hose into the drain outlet. Make sure to connect them firmly using the joint ring.
The drain hose is extensible. Adjust the length of the drain hose as needed.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 17 2015-01-20 오후 3:52:07

Installation

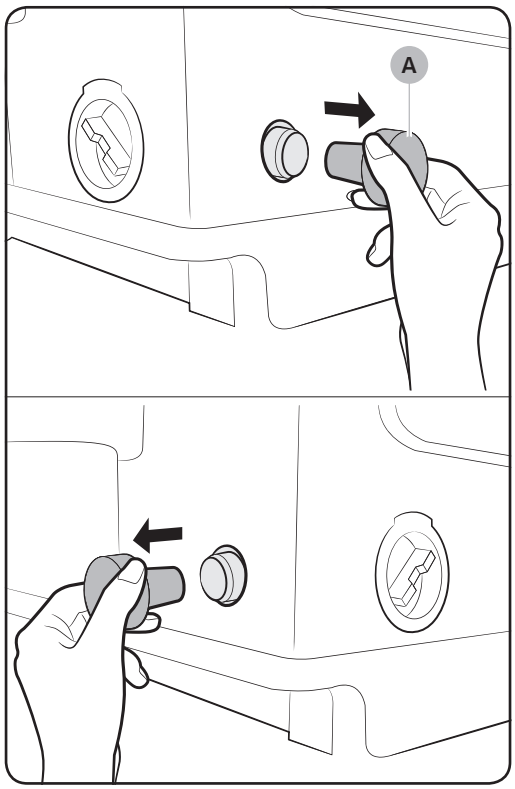

Pump type

1. Open the hose cap (A), and insert the drain hose. Tighten the drain hose using the joint ring.

NOTE

- The position (side or rear) of the drain outlet depends on the model.
- Availability of the hose cap depends on the model.

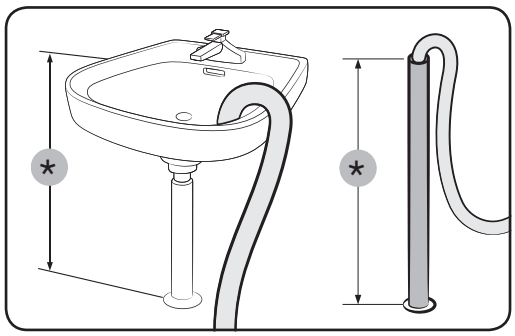

2. Connect the other end of the drain hose to a standpipe or basin that is positioned 90-100 cm (*) from the floor.

⚠ WARNING

Make sure the end of the drain hose is not submerged by water. Otherwise, the washing machine may suffer serious damage.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 18 2015-01-20 오후 3:52:08

⚠ **CAUTION**

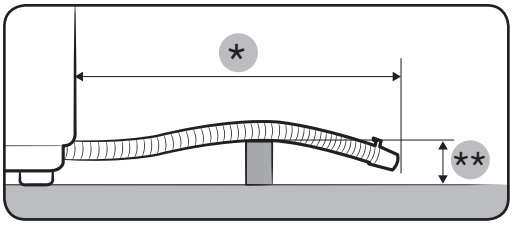

- Do not exceed **3 m (*)** for the total length of extended hoses.
- Do not let the drain hose run over doorsills that protrude **5 cm (**)** or more from the floor.

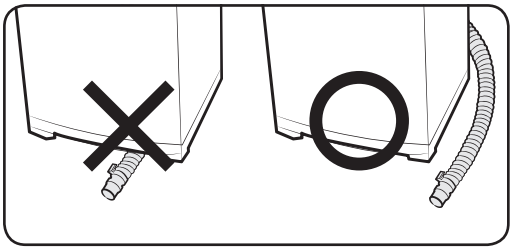

- Do not run the drain hose under the bottom of the machine.

STEP 5 Power on

Plug the power cord into a wall socket featuring an AC 220 V / 50 Hz approved electrical outlet protected by a fuse or circuit breaker. Then, press **Power** to turn on the washing machine.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 19 2015-01-20 오후 3:52:08

Before you start

The basics

Prewash (Water Jet & Built-in sink)

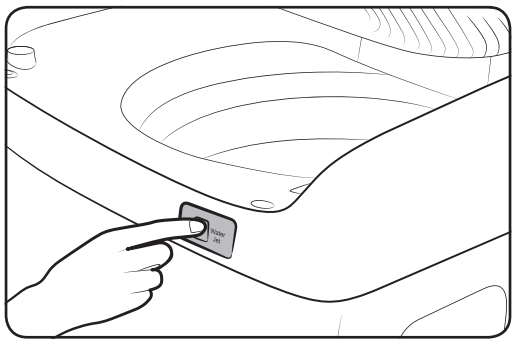

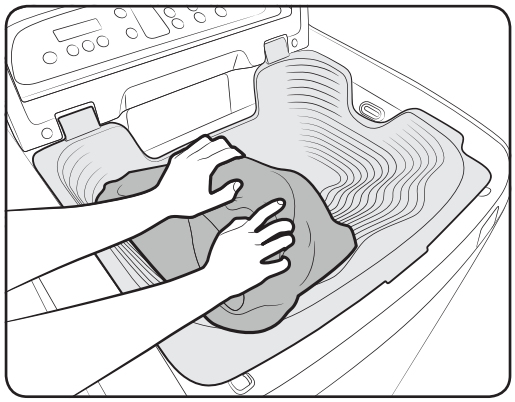

Water Jet and Built-in sink help you hand-wash before the washing machine starts operation. Water Jet is available only when the door is open with the water level set to less than High. For prewashing, use the Built-in sink that is designed to facilitate the hand-wash.

1. With the door open, lower the Built-in sink, and put clothes to prewash on it.
2. Press **Water Jet** to supply water to the Built-in sink, and hand-wash.
3. When done, you can either reuse the water in the main cycle or simply drain.
   - To reuse the water, run the water down to the tub manually.
   - To drain the water, press **Drain**.

NOTE

- If you want to hand-wash while the machine is operating, press **Start/Pause** to stop operation, and then follow steps 1-3 above.
- If you open both the door and the Built-in sink, lower the Built-in sink manually for prewashing.

CAUTION

- Do not abuse Water Jet. Excessive use of Water Jet increases water consumption.
- When running water to the tub, do that gently. Otherwise, water may overflow the tub.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 20 2015-01-20 오후 3:52:09

Detergent drawer

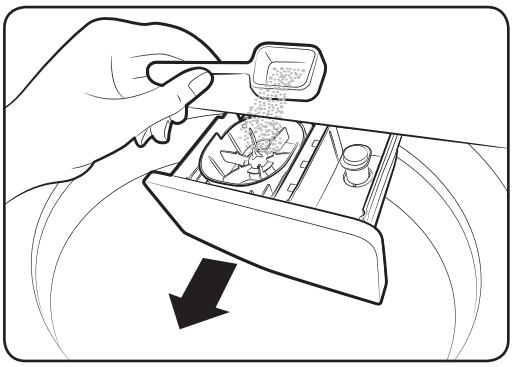

To add a laundry-specific detergent, follow these steps:

1. Open the door then the Built-in sink to reveal the tub.
2. Locate the detergent drawer, and slide it open.
3. Apply powder detergent as recommended by the manufacturer. Do not exceed the max line that is marked on the wing distributor.
4. If necessary, apply fabric softener as appropriate. Do not exceed the max line that is marked on the rinse cap.

⚠ CAUTION

Make sure to use detergent as appropriate. An excessive amount of detergent may not dissolve well.

Child Lock

Child Lock is designed to prevent accidents by children or infants, such as drowning.

1. Press **Power**.
2. To activate the Child Lock, hold down **Rinse** and **Power Spin** simultaneously for 3 seconds. The indicator blinks.
3. To deactivate the Child Lock, hold down **Rinse** and **Power Spin** simultaneously for 3 seconds. The indicator turns off. If the tub has contained water, simply restart the machine and hold down two buttons simultaneously for 3 seconds to deactivate the Child Lock.

With the Child Lock enabled

- You can still manipulate on the control panel while the door is closed. If you open the door, an information code (CL, dC) appears with an alarm. Then, the machine starts forced draining after 30 seconds in order to prevent infant or child accidents such as drowning.
- Only when water supply is complete, the Child Lock becomes active.
- If the door leaves open for 30 seconds with the tub containing water, the machine drains the water with the “CL” code, which you cannot stop.
- To add detergent or more laundry in the tub, or to change the cycle settings, you must first deactivate the Child Lock.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 21 2015-01-20 오후 3:52:09

Before you start

⚠ WARNING

If you open the door with the Child Lock enabled, the machine starts forced draining to prevent accidents such as drowning.

NOTE

The Child Lock remains active after you power off the machine. You cannot deactivate the Child Lock as long as the “CL” code appears on the display. But, you can deactivate when the dC code appears by holding down two buttons simultaneously.

Smart Check

To enable this function, you must first download the **Samsung Smart Washer** app at the **Play Store** or the **Apple Store**, and install it on a mobile device featuring a camera function.

The Smart Check function has been optimized for Galaxy & iPhone series (applicable models only).

1. Press and hold **Wash** and **Rinse** simultaneously for 3 seconds to enter the Smart Check mode.
2. The washing machine starts the self-diagnosis procedure and displays an information code if a problem is detected.
3. Run the **Samsung Smart Washer** app on your mobile device, and tap **Smart Check**.
4. Put the mobile device close to the washing machine’s display so that the mobile device and the washing machine face each other. Then, the information code will be recognized automatically by the app.
5. When the information code is recognized correctly, the app provides detailed information about the problem with applicable solutions.

NOTE

- The function name, Smart Check, may differ depending on the language.
- If there is strong reflected light on the washing machine display, the app may fail to recognize the information code.
- If the app fails to recognize the Smart Check code consecutively, enter the information code manually onto the app screen.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 22 2015-01-20 오후 3:52:10

Laundry guidelines

Checkpoints

- Check for stains or dirt. Apply a little detergent to a white towel. Rub the white towel and the dirty clothes together to transfer the dirt or colour to the white towel.
- Before washing, pre-treat the sleeves, collars, dress hems, and pockets by brushing with detergent.
- Wrinkle-processed clothes made of wool must be specially treated by tightening them with threads before washing. Remove the threads after washing and drying is complete.

⚠ CAUTION

- Do not keep heavy clothes or objects in the tub.
- Do not put candles or a heat source in or on the washing machine.
- Do not wash these clothes:
  - Neckties, brassieres, jackets, suits, and coats can be easily deformed by shrinking or discolouring on the surface. These clothes are mostly made of rayon, polynosic, cuff, and/or blended fabric.
  - Wrinkle-processed, embossed, or resin processed clothes easily deform merely by soaking in water.
  - Clothes that are easily discoloured made from cotton, wool, wrinkled silk, leather wear and accessories, and leather ornamented clothes and accessories.
  - Waterproof clothes (skiwear, diaper covers, footboards, etc) are likely to be ejected or cause abnormal noise or vibration, resulting in physical injury or property damage.

STEP 1 Sort

Sort the laundry according to these criteria:

- Care Label: Sort the laundry into cottons, mixed fibres, synthetics, silks, wools, and rayon.
- Colour: Separate whites from colours.
- Size: Mixing different-sized items together in the tub improves the washing performance.
- Sensitivity: Follow the cloth-specific instructions on the care label of delicate items such as pure, new woollen items, curtains, and silk items.

NOTE

Make sure to check the care label on the clothing, and sort them accordingly before starting the wash.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 23 2015-01-20 오후 3:52:10

Before you start

STEP 2 Empty pockets

Empty all the pockets of your laundry items, and remove dirt and/or soils from them.

- Metal objects such as coins, pins, and buckles on clothing may damage other laundry items as well as the tub.
- Turn clothing with buttons and embroideries inside out.
- If pants or jacket zippers are open while washing, the tub may be damaged.
- Zippers should be closed and fixed with a string.
- Clothing with long strings may become entangled with other clothes. Make sure to tie the strings before washing.

STEP 3 Use a laundry net

- Brassieres (water washable) must be placed in a laundry net. Metal parts of the brassieres may break through and tear other laundry items.
- Cashmilon, large volume garments, and lightweight clothes (lace-decorated clothes, lingerie, nylon stocking, and synthetic fabrics) may float on water during washing and cause problems to the machine. Use the laundry net or wash them separately.
- Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and result in injury.

STEP 4 Prewash (if necessary)

- To remove stains and dirt on collars, sleeves, hems, and pockets, apply detergent lightly and brush off.
- Use powder or liquid detergents. Do not use soap, as this may remain on the tub after washing.
- Prewash white socks, sleeves, and collars with a little detergent and a brush.

STEP 5 Determine the load capacity

Do not overload the washing machine. Overloading may cause the washing machine to not wash properly.

NOTE

When washing bedding or bedding covers, the wash time may be lengthened or the spin efficiency may be reduced. For bedding or bedding covers, the recommended load capacity is 3.5 kg or less.

CAUTION

If the laundry is unbalanced and the “Ub” information code is displayed, redistribute the load. Unbalanced laundry may reduce the spinning performance.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 24 2015-01-20 오후 3:52:10

STEP 6 Apply a proper detergent type

The type of detergent depends on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use “low suds” laundry detergent, which is designed for automatic washing machines.

⚠ CAUTION

- Use an appropriate amount of detergent. Excess amounts of detergent do not produce much improvement in washing results but cause damage to the laundry due to deteriorated rinsing performance.
- Bleach is strong alkali in nature, causing damage to or discolouration of the laundry.
- Use a longer or added rinse cycle when using powder detergent that is very likely to remain on the laundry and cause bad odours after washing is complete.
- If an excessive amount of detergent is used especially in cold water, the detergent doesn’t dissolve well, ending up with contaminated laundry, hoses, and/or tub.
- In case of timed washing, do not apply detergent directly to laundry or the tub. The laundry may be discoloured. Use the detergent drawer.
- When washing wool using the Wool cycle, use only a neutral detergent to avoid discolouring the laundry.

NOTE

- Follow the detergent manufacturer’s recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your local area. If you are not sure about the water hardness, contact a local water authority.
- Do not use detergent that tends to be hardened or solidified. This detergent may remain after the rinse process, blocking the drain outlet.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 25 2015-01-20 오후 3:52:10

Operations

Control panel

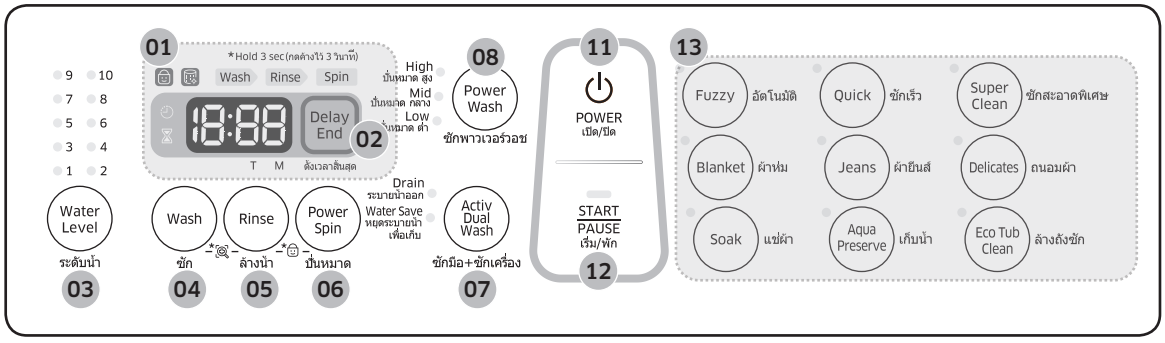

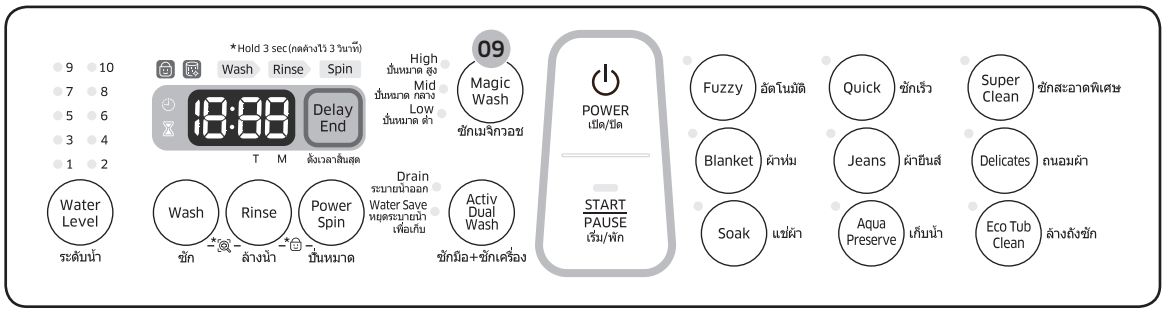

01 Display	Displays the remaining time of a cycle, or the information code when a problem occurs.
02 Delay End	Press this button to finish the wash at a specified time. To cancel the Delay End settings, simply turn off the washing machine. You can set the Delay End time up to 19 hours.
03 Water Level	The water level is adjusted according to the cycle. However, you can change the level manually.
04 Wash	Press to start washing, or adjust the wash time between 6 and 30 minutes.
05 Rinse	Press to run the rinse cycle, or change the rinse count up to 5.
06 Power Spin	Press to run the spin cycle, or change the spinning time in this sequence: 1-9 min (increase by 1 minute) > 15 min > 30 min.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 26 2015-01-20 오후 3:52:11

07 Activ Dual Wash	This button provides two options, and is available only when the washing machine is stopped or in Standby state. • Water Save (default): Select to reuse water in the tub that remains after using Water Jet. The water will be used for the main cycle. • Drain: Select to drain water that remains after using Water Jet. When draining is complete, the washing machine switches to Water Save mode automatically. Then, you can choose a cycle.
08 Power Wash	Power Wash introduces a digital inverter motor to fine-tune the water-flow level for washing and spinning.
09 Magic Wash	Magic Wash lets you adjust the water-flow level for washing and spinning. Three options are available: LOW, MIDDLE, and HIGH.
10 Power	Press once to turn the machine on, or twice to turn it off.
11 Start/Pause	Press to stop or resume operation. To change the cycle sequence, press once to stop operation, and then change the sequence. To resume operation, press again.
12 Cycle Panel	Choose one that best suits your needs.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 27 2015-01-20 오후 3:52:11

Operations

Simple steps to start

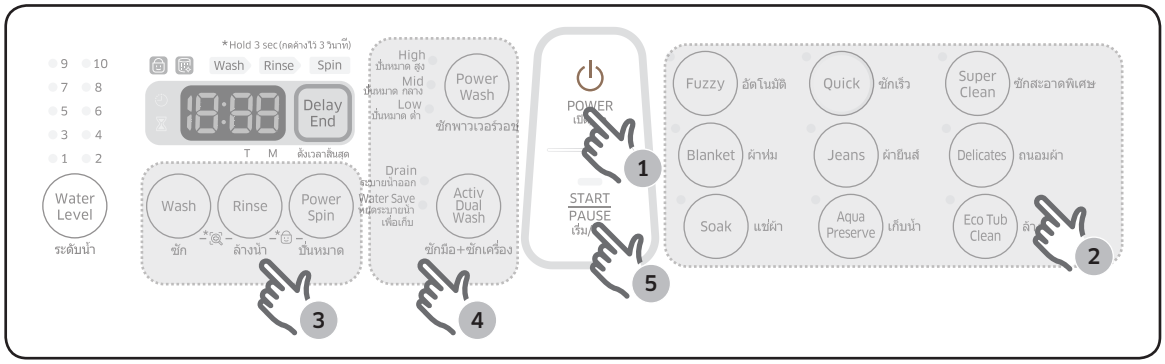

1. Press **Power** to turn on the washing machine.
2. Select a cycle in the cycle panel.
3. Change the cycle settings (wash time, rinse count, and/or spinning time) as necessary.
4. To add an option such as **Power Wash, Magic Wash** and **Activ Dual Wash**, press the corresponding button.
5. Press **Start/Pause**.

To change the cycle during operation

1. Press **Start/Pause** to stop operation.
2. Select a different cycle, and repeat steps 2-3 above if necessary.
3. Press **Start/Pause** again to start the new cycle.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 28 2015-01-20 오후 3:52:12

Auto cycles

Cycle	Description
Fuzzy	• Select this for most fabrics including cottons, liners, and normally soiled garments.
Quick	• Select this for less soiled clothes in reduced time.
Super Clean	• Select this if you want to produce powerful cleaning performance.
Blanket	• Suitable for a large-sized laundry such as blankets and bed cover sheets.
Jeans	• Suitable for clothes that require a thorough wash.
Delicates	• Select this for delicate items such as sweaters, cardigans, or wool clothes.
Soak	• With this selected, the washing machine adds a soaking process in advance of the main cycle.
Aqua Preserve	• Use this if you want to save the water to use. The water used in the rinse process will be reused for the next process.
Eco Tub Clean	• Select this to clean the tub. The powerful spinning force will remove impurities and bad odours from inside the tub. • If you see the indicator blinking, this indicates that it is recommended to clean the tub using Eco Tub Clean. For details, see the Cleaning section in this manual.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 29 2015-01-20 오후 3:52:12

Operations

Manual cycles

You might want to use a single cycle to wash less soiled clothes. For example, you can run the wash cycle once for nightwear.

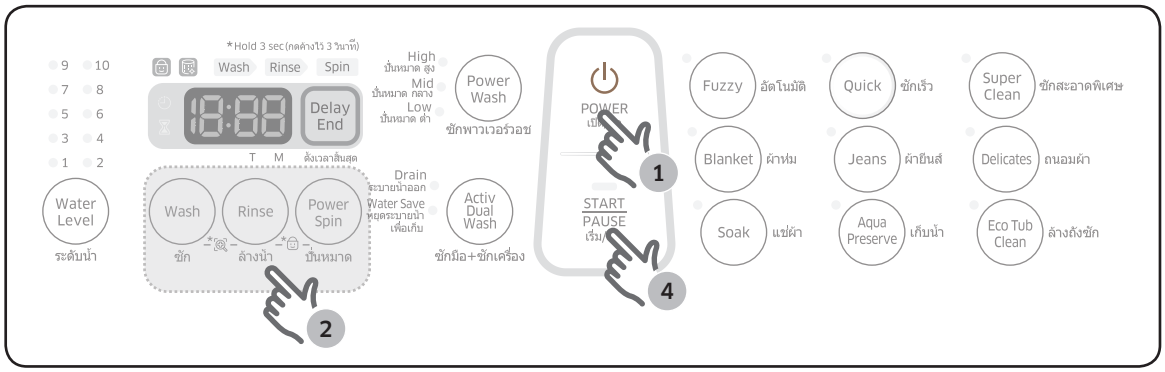

1. Press **Power** to turn on the washing machine.
2. Press **Wash**/**Rinse**/**Power Spin** to run the individual cycle to your needs. The duration or count of each cycle can be adjusted by pressing the applicable button as many times as needed.

Wash time	Rinse count	Power Spin time
6-30 minutes	1-5 times	1-9, 15, 30 minutes

3. If you want to run a combination of cycles, press applicable cycle buttons as below:

Wash + Rinse	Rinse + Spin	Wash + Rinse + Power Spin
Rinsing after washing	Spinning after rinsing	Washing, rinsing, and then spinning in sequence

4. Press **Start/Pause**.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 30 2015-01-20 오후 3:52:12

Maintenance

Cleaning

Keep the washing machine clean to prevent deteriorated performance and to preserve its life cycle.

Eco Tub Clean reminder

- The indicator reminds you of cleaning the tub when necessary. If you happen to see the indicator blinking after washing is complete, remove the laundry and run the Eco Tub Clean cycle.
- You can ignore this reminder and continue to run cycles normally because this is not a system failure. However, the reminder remains active for 6 consecutive cycles immediately after each cycle is complete.
- The reminder is activated once every 1-3 months, depending on the cycle count.
- To keep the tub clean, it is recommended to run Eco Tub Clean on a regular basis.

Built-in sink

1. Open the door, and use a cloth or sponge to clean the Built-in sink.
2. Press **Water Jet** to supply water to the board. Use this water to rinse the board.

Lint filter

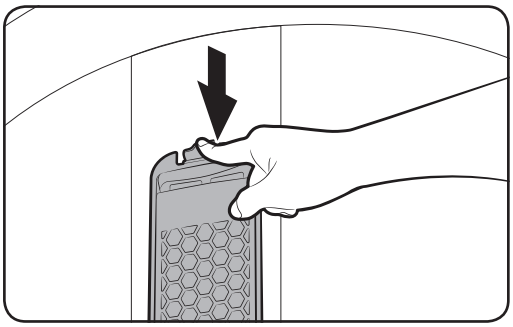

1. Press down the upper area of the filter case to remove.
2. Unlock the cover, and clean the filter with running water and a brush.

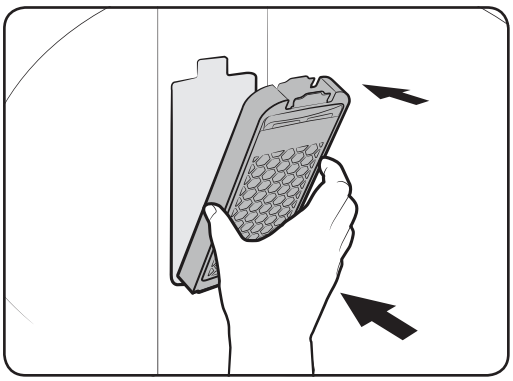

3. When cleaning is complete, close the cover and reinsert the filter case to the original position. You will hear a clicking sound when the filter case fits in.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 31 2015-01-20 오후 3:52:13

Maintenance

Pump filter (applicable models only)

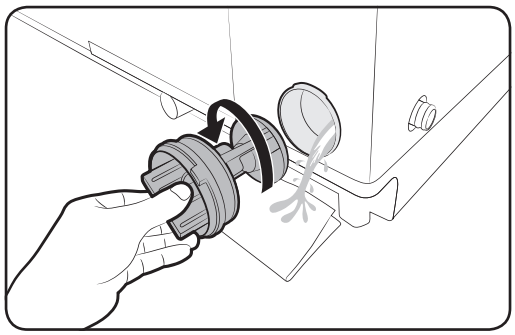

1. Put a floor-cloth or towel under the Pump filter. Turn the filter knob anticlockwise to remove.

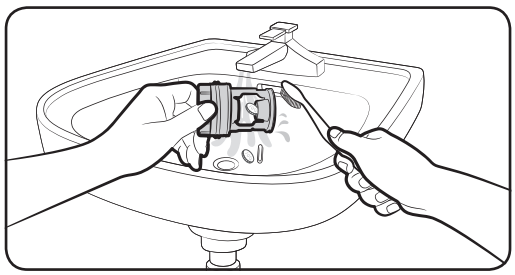

2. Clean the filter with running water and a soft brush.

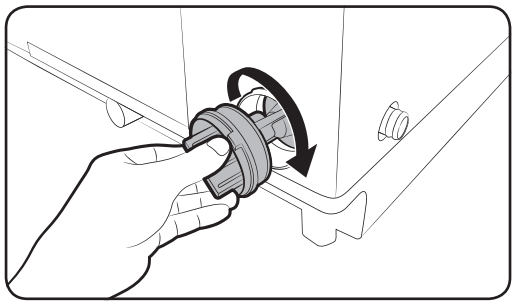

3. Reinsert the filter, and turn clockwise until it locks into position.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 32 2015-01-20 오후 3:52:13

Mesh filter

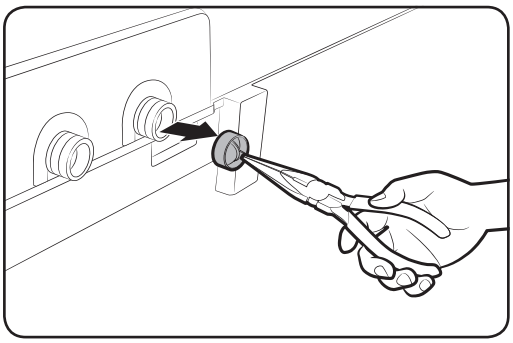

1. Use pliers to pull out the mesh filter from inside the water inlet as shown.
2. Use a soft brush to clean the filter with running water.

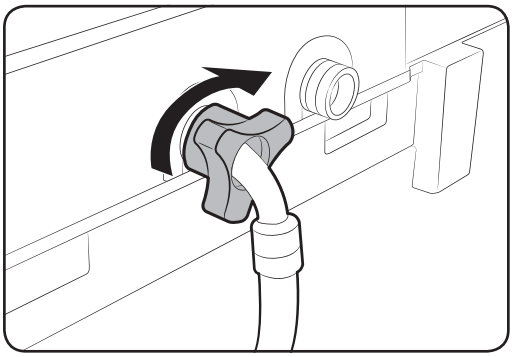

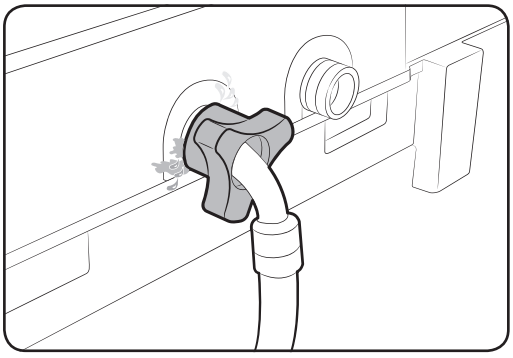

3. Reinsert the filter. Make sure it is tightened against water leaks.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 33 2015-01-20 오후 3:52:14

Maintenance

Detergent drawer

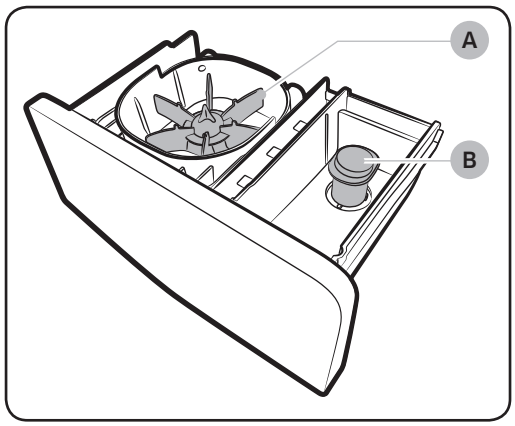

1. Open the door and then the Built-in sink to reveal the detergent drawer.
2. Slightly lift up the front edge of the drawer, and then slide it open.
3. Remove the wing distributor (A) and rinse cap (B) from the drawer.

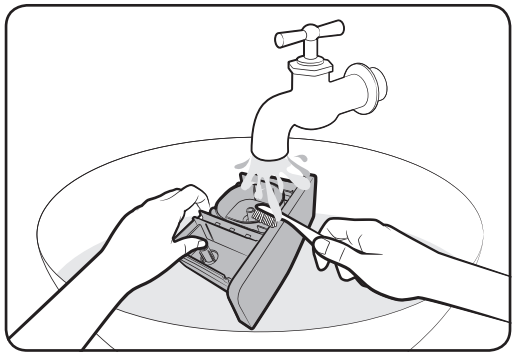

4. Clean the drawer as well as the distributor and rinse cap with running water and a soft brush.

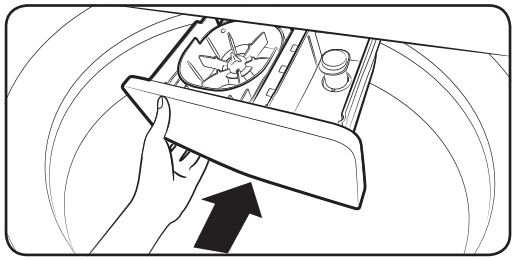

5. When complete, close the rinse cap and reinsert the distributor. Then, reinsert the detergent drawer.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 34 2015-01-20 오후 3:52:15

Troubleshooting

Checkpoints

If you encounter a problem with the washing machine, first check the table below and try the suggestions.

Problem	Action
Does not turn on.	• Make sure you use rated power for the product. • Make sure the power cord is completely plugged in. • Check the fuse or reset the circuit breaker.
Does not start.	• Make sure the door is closed. • Make sure the water taps are open. • Make sure to press or tap **Start/Pause** to start the washing machine. • Make sure Child Lock is not activated. • Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and does a quick drain. • Was the door opened during the spinning cycle? Close the door, and press or tap **Start/Pause** to resume. • The machine enters Standby or is in a soaking cycle. Please wait. • Check the fuse or reset the circuit breaker.
Water is not supplied.	• Make sure you press or tap **Start/Pause** after selecting the water supply. • Make sure the water taps are open. • Is the filter net at the water supply hose connector clogged? Clean the filter net by brushing with a toothbrush. • Is the water supply cut off? If the water supply is cut off, close the tap and power off. • Straighten the water supply hoses. • Open and close the door, then press or tap **Start/Pause**. • If the water pressure is low, it takes longer to start washing. • If the water level is not as high as necessary or lower than expected, use the level selector to adjust the water level.
After a cycle, detergent remains in the automatic dispenser.	• Make sure the washing machine is running with sufficient water pressure. • Make sure the detergent drawer is properly inserted. • Remove and clean the detergent drawer, and then try again.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 35 2015-01-20 오후 3:52:15

Troubleshooting

Problem	Action
Vibrates excessively or makes noise.	• Make sure the washing machine is set on a level floor. If the floor is not level, use the levelling feet to adjust the washing machine. • Make sure the washing machine is not contacting any other object. • Make sure the laundry load is balanced. • Make sure the laundry is spread evenly in the washing machine. Spread out the laundry evenly and start again. • Make sure the space around the washing machine is free of objects. • Humming is produced normally during operation. • Objects such as coins can cause noise. Remove these objects from the washing machine after washing is complete.
Stops.	• Plug the power cord into a live electrical outlet. • Check the fuse or reset the circuit breaker. • Close the door, and press or tap **Start/Pause** to start the washing machine. For your safety, the washing machine will not spin unless the door is closed. • Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and does a quick drain. • There may be a pause or soak period in the cycle. Wait briefly and the washing machine may start. • Make sure the inlet hose screens at the taps are not clogged. Periodically clean the screens. • This problem occurs temporarily due to low voltages, and will be solved when power recovers.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 36 2015-01-20 오후 3:52:15

Problem	Action
Fills with the wrong temperature water.	• Fully open both water taps. • Make sure the temperature selection is correct. • Make sure the hoses are connected to the correct water taps. Flush water lines. • Disconnect the hoses and clean the screens. The hose filter screens may be clogged. • While the washing machine fills, the water temperature may change as the automatic temperature control feature checks incoming water temperature. This is normal. • While the washing machine fills, you may notice just hot and/or just cold water going through the dispenser when cold or warm temperatures are selected. This is a normal function of the automatic temperature control feature as the washing machine determines the water temperature.
Door (Lid) locked or will not open.	• While the washing machine is operating, press or tap **Start/Pause** to stop the washing machine. • It may take a few moments for the door lock mechanism to disengage.
Does not drain and/or spin.	• Check the fuse or reset the circuit breaker. • Make sure the electrical voltage is normal. • Make sure the washing machine is plugged in. • Make sure the drain hose is pointed downward. (Natural drain models only) • Make sure the drain hose is not clogged. • Make sure the drain hose is not kinked. • Straighten the drain hose. If there is a drain restriction, call for service. • Close the door, and press or tap **Start/Pause**. For your safety, the washing machine will not spin unless the door is closed.
Load is wet at the end of the cycle.	• Use the High or Extra High spin speed. (Applicable model only) • Use high efficiency (HE) detergent to reduce oversudsing. • Load is too small. Small loads (one or two items) may become unbalanced and not spin completely.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 37 2015-01-20 오후 3:52:15

Troubleshooting

Problem	Action
Leaks water.	• Make sure all hose connections are tight. • Make sure the water supply hose's rubber packing is in the correct position. Screw tightly again. • Make sure the end of the drain hose is correctly inserted and secured to the drain system. • Avoid overloading. • Use high efficiency (HE) detergent to prevent oversudsing. • Make sure the water supply hose is not kinked. • If the water supply is too strong, water may leak. Close the water tap a little. • Make sure water is not leaking from the water tap. If so, repair the water tap.
Excessive suds.	• Use high efficiency (HE) detergent to prevent oversudsing. • Reduce the detergent amount for soft water, small loads, or lightly soiled loads. • Non-HE detergent is not recommended.
The spin basket or drain/supply hose is frozen.	• Use warm water to disconnect the water supply hose and drain hose. Soak them in warm water. • Fill the spin basket with warm water, and then wait for about 10 minutes. • Put a hot towel on the drain hose connector. • Reconnect the water supply hose and drain hose, and check if water is supplied properly.
Water drains out immediately.	• Make sure the drain hose is not clogged, and is hung over the drain hose hook. Fill the spin basket halfway with water, and try spinning again. • Lift the end of the drain hose to prevent water from draining. Fill the spin basket halfway with water, and then run spinning after releasing the drain hose. • Make sure the drain hose is installed correctly. See the installation section of this user manual and adjust the position of the drain hose as instructed.
Stains on clothes.	• Clean the magic filter.
Has odours.	• Excessive suds collect in recesses and can cause foul odours. • Run cleansing cycles to sanitize periodically. • Dry the washing machine interior after a cycle has finished.

If a problem persists, contact a local Samsung service centre.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 38 2015-01-20 오후 3:52:15

Information codes

If the washing machine fails to operate, you may see an information code on the display. Check the table below and try the suggestions.

Code	Action
1C	The WaterLevel sensor is not working properly. • Check WaterLevel Sensor wire harness. • If the information code remains, contact a customer service centre.
3C	Motor problem • Try restarting the cycle. • If the problem continues, call for service.
4C	Water is not supplied. • Make sure the water taps are open. • Make sure the water hoses are not clogged. • Make sure the water taps are not frozen. • Make sure the washing machine is operating with sufficient water pressure. • Make sure that the cold water tap and the hot water tap are properly connected. • Clean the mesh filter as it may be clogged.
4C2	• Make sure the cold water supply hose is firmly connected to the cold water tap. If it is connected to the hot water tap, the laundry may be deformed with some cycles.
5C	Water is not draining. • Make sure the drain hose is not frozen or clogged. • Make sure the drain hose is positioned correctly, depending on the connection type. • Clean the debris filter as it may be clogged. • Make sure the drain hose is straightened all the way to the drain system. • If the information code remains, contact a customer service centre.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 39 2015-01-20 오후 3:52:15

Troubleshooting

Code	Action
9C1	Electronic Control Problem (Over Voltage Error) • Check the PCB and wire harness. • Check if power is supplied properly. • If the information code remains, contact a customer service centre.
9C2	Low voltage detected • Check if the power cord is plugged in. • If the information code remains, contact a customer service centre.
AC6	Inverter Communication problem • Check the Inverter PCB and wire harness. • If the information code remains, contact a customer service centre.
dC	Operating the washer with the door open. • Make sure the door is properly closed. • Make sure laundry is not caught in the door.
HC	Water temperature control problem (Heater control) • If the information code remains, contact a customer service centre.
LC	Check the drain hose. • Make sure the end of the drain hose is placed on the floor. • Make sure the drain hose is not clogged. • If the information code remains, contact a customer service centre.
OC	Water is overflowed. • Restart after spinning. • If the information code remains on the display, contact a local Samsung service centre.
PC	When position of the clutch can't be detected. • If the information code remains, contact a customer service centre.
PC1	After position of the clutch is detected, if the signal of the clutch hall goes wrong. • If the information code remains, contact a customer service centre.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 40 2015-01-20 오후 3:52:15

Code	Action
Ub	Spinning does not work. • Make sure laundry is spread out evenly. • Make sure the washing machine is on a flat, stable surface. • Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory, and an “Ub” check message will be shown in the display.

If any information code keeps appearing on the screen, contact a local Samsung service centre.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 41 2015-01-20 오후 3:52:15

Specifications

Specification sheet

Type		Top loading washing machine		
		WA16J675***	WA15J675***	WA14J673***
Max load (kg)	Washing	16.0	15.0	14.0
Power consumption (W)	Washing	360 - 420		600
	Spin	300		350
Dimensions (mm)		W630 x D690 x H1100		W630 x D690 x H1080
Net weight (kg)		49.0		
Water pressure (Mpa (kg·f/cm^2))		0.05 - 0.78 (0.5 - 8.0)		
Washing type		Stirring type		
Water level (L)	10	96		94
	8	81		79
	6	69		69
	4	59		59
	2	47		47
Water usage (L)		177		174
Spin speed (rpm)		720		700

NOTE

- Asterisk (*) means variant model and can be varied (0-9) or (A-Z).
- The design and specifications are subject to change without notice for quality improvement purposes.

WA6700JS(PREMIUM)-03515A_EN_K_150120.indd 42 2015-01-20 오후 3:52:15

Memo

SAMSUNG

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th/support

DC68-03515A-00

เครื่องซักผ้า

คู่มือผู้ใช้

WA16J675***/WA15J675***/WA14J673***

SAMSUNG

ภาษาไทย

สารบัญ

ข้อมูลเกี่ยวกับความปลอดภัย **3**

สิ่งที่คุณต้องทราบเกี่ยวกับคำแนะนำเพื่อความปลอดภัย 3
ข้อมูลสำคัญเพื่อความปลอดภัย 3
ข้อควรระวังเพื่อความปลอดภัยที่สำคัญ 4

การติดตั้ง **10**

มีชิ้นส่วนใดบ้าง 10
ข้อกำหนดในการติดตั้ง 12
การติดตั้งแบบทีละขั้นตอน 13

ก่อนการเริ่มต้น **21**

พื้นฐาน 21
ระบบตรวจสอบอัจฉริยะ 23
คำแนะนำของผ้า 24

การทำงาน **26**

แผงควบคุม 26
ขั้นตอนง่ายๆ ในการเริ่มต้น 28
โปรแกรมอัตโนมัติ 29
โปรแกรมที่กำหนดเอง 30

การบำรุงรักษา **31**

การทำความสะอาด 31

การแก้ไขปัญหา **35**

จุดตรวจสอบ 35
รหัสข้อมูล 38

ข้อมูลจำเพาะ **40**

ข้อมูลจำเพาะ 40

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 2 2015-01-21 11:07:09

ข้อมูลเกี่ยวกับความปลอดภัย

ขอแสดงความยินดีกับเครื่องซักผ้า Samsung เครื่องใหม่ของคุณ คู่มือนี้มีข้อมูลที่สำคัญเกี่ยวกับการติดตั้ง การใช้งานและการบำรุงรักษาเครื่องซักผ้า Samsung เครื่องใหม่ของคุณ โปรดสละเวลาเพื่ออ่านคู่มือนี้ เพื่อใช้ประโยชน์สูงสุดจากคุณสมบัติและคุณประโยชน์มากมายของเครื่องซักผ้า

สิ่งที่คุณต้องทราบเกี่ยวกับคำแนะนำเพื่อความปลอดภัย

โปรดอ่านคู่มือให้ละเอียดเพื่อให้ทราบถึงวิธีใช้อุปกรณ์อย่างปลอดภัยและสามารถใช้คุณลักษณะและการทำงานขั้นสูงต่างๆ อย่างมีประสิทธิภาพ โปรดเก็บคู่มือไว้ในที่ปลอดภัยใกล้กับเครื่อง เพื่อใช้อ้างอิงในอนาคต ใช้อุปกรณ์นี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น

คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวัง และใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานเครื่องซักผ้า

เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเครื่องซักผ้าของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอย่างอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการที่ใกล้ที่สุด หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com

ข้อมูลสำคัญเพื่อความปลอดภัย

ความหมายของสัญลักษณ์และเครื่องหมายในคู่มือผู้ใช้นี้:

คำเตือน

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด **การบาดเจ็บร้ายแรง และ/หรือทรัพย์สินเสียหาย**

ข้อควรระวัง

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด **การบาดเจ็บหรือทำให้สิ่งของเสียหาย**

หมายเหตุ

แสดงว่ามีความเสี่ยงที่จะเกิดการบาดเจ็บหรือสิ่งของเสียหาย

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 3 2015-01-21 11:07:09

ข้อมูลเกี่ยวกับความปลอดภัย

สัญลักษณ์คำเตือนเหล่านี้มีให้เพื่อป้องกันการบาดเจ็บของตัวคุณเองและบุคคลอื่น
โปรดปฏิบัติตามอย่างเคร่งครัด
หลังจากอ่านคู่มือนี้แล้ว โปรดเก็บไว้เพื่อนำมาอ้างอิงในภายหลัง

อ่านคำแนะนำทั้งหมดก่อนที่จะใช้อุปกรณ์

เช่นเดียวกับอุปกรณ์ทุกชนิดที่ใช้ไฟฟ้าและมีชิ้นส่วนที่เคลื่อนไหว อุปกรณ์นี้อาจมีอันตรายได้ ในการใช้อุปกรณ์นี้อย่างปลอดภัย โปรดทำความเข้าใจกับการทำงานและใช้ความระมัดระวังขณะใช้งาน

ข้อควรระวังเพื่อความปลอดภัยที่สำคัญ

⚠ คำเตือน

ในการลดความเสี่ยงจากไฟ การระเบิด ไฟฟ้าช็อต หรือการบาดเจ็บขณะใช้อุปกรณ์ โปรดปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้:

อย่าให้เด็ก (หรือสัตว์เลี้ยง) เล่นบนเครื่องซักผ้าหรือในเครื่องซักผ้า ประตูเครื่องซักผ้านั้นไม่สามารถเปิดได้โดยง่ายจากภายใน และเด็กอาจได้รับบาดเจ็บร้ายแรงถ้าติดอยู่ภายใน

อุปกรณ์นี้ไม่เหมาะสำหรับบุคคลที่มีสภาพร่างกาย ประสาทสัมผัสหรือจิตที่ไม่ปกติ รวมถึงเด็กหรือบุคคลที่ขาดประสบการณ์ ความรู้ ยกเว้นจะได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล โปรดระวังมิให้เด็กเล่นกับอุปกรณ์นี้

โปรดดูแลมิให้เด็กเล่นกับอุปกรณ์นี้

สำหรับใช้ในยุโรป: อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไปและบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มีการดูแล

กรณีที่ปลั๊กไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิต ตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย

ควรจัดวางอุปกรณ์นี้เพื่อให้สามารถเข้าถึงปลั๊กไฟ ก๊อกน้ำและท่อระบายน้ำได้โดยง่าย

สำหรับอุปกรณ์ที่มีช่องระบายอากาศที่ฐาน โปรดอย่าให้พรมปิดกั้นช่องนี้

โปรดใช้ชุดท่อใหม่ที่มาพร้อมกับอุปกรณ์ และไม่ควรใช้ชุดท่อเดิม

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 4 2015-01-21 11:07:09

⚠ ข้อควรระวัง

เพื่อป้องกันอันตรายจากการรีเซ็ตอุปกรณ์ตัดความร้อนโดยไม่ตั้งใจ ห้ามจ่ายไฟให้กับอุปกรณ์นี้ผ่านอุปกรณ์สวิตช์ภายนอก เช่น เครื่องตั้งเวลา หรือต่อกับวงจรที่มีการปิดเปิดสวิตช์เป็นประจำโดยหน่วยงานผู้จ่ายไฟ

⚠ ข้อควรระวัง

เมื่อใช้น้ำร้อนในการซัก โปรดใช้น้ำร้อนที่มีอุณหภูมิไม่เกิน 50°C
ชิ้นส่วนที่เป็นพลาสติกอาจบิดเบี้ยวหรือเสียหาย และอาจก่อให้เกิดไฟฟ้าช็อตหรือไฟไหม้ได้

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 5 2015-01-21 11:07:09

ข้อมูลเกี่ยวกับความปลอดภัย

คำเตือนที่สำคัญสำหรับการติดตั้ง

⚠ คำเตือน

การติดตั้งอุปกรณ์นี้ต้องกระทำโดยช่างเทคนิคที่ได้รับการรับรอง หรือบริษัทผู้ให้บริการ

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ การระเบิด ปัญหากับผลิตภัณฑ์ หรือการบาดเจ็บ

ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนังตามข้อกำหนดทางไฟฟ้าของพื้นที่ ใช้เต้ารับสำหรับอุปกรณ์นี้เท่านั้น และโปรดอย่าใช้สายไฟสำหรับต่อ

- การใช้เต้ารับไฟฟ้าที่ผนังร่วมกับอุปกรณ์อื่นโดยผ่านสายไฟสำหรับต่อ หรือแถบปลั๊กไฟ อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
- ตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงกับในข้อมูลจำเพาะของผลิตภัณฑ์ มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนังอย่างแน่นหนา

นำสิ่งแปลกปลอมทั้งหมด เช่น ฝุ่นละอองหรือน้ำออกจากขั้วของปลั๊กไฟและหน้าสัมผัสเป็นประจำ โดยใช้ผ้าแห้ง

- ถอดปลั๊กไฟและทำความสะอาดด้วยผ้าแห้ง
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้
- ต่อปลั๊กไฟเข้ากับเต้ารับโดยให้สายไฟพาดไปทางพื้น
  ถ้าคุณต่อปลั๊กไฟกับเต้ารับในทางตรงกันข้าม ลวดนำไฟฟ้าภายในสายไฟอาจเสียหายและทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

อุปกรณ์นี้ต้องได้รับการลงกราวด์อย่างเหมาะสม

ห้ามลงกราวด์อุปกรณ์กับท่อก๊าซ ท่อน้ำพลาสติก หรือสายโทรศัพท์

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ การระเบิด หรือปัญหากับผลิตภัณฑ์
- ห้ามต่อปลั๊กไฟฟ้ากับเต้ารับไฟฟ้าที่ไม่ได้ลงกราวด์อย่างถูกต้อง และโปรดตรวจสอบว่าเป็นไปตามข้อกำหนดของท้องถิ่นและของประเทศ

ห้ามติดตั้งอุปกรณ์นี้ใกล้เครื่องทำความร้อน วัตถุไวไฟ

ห้ามติดตั้งอุปกรณ์นี้ในที่ชื้น มีน้ำมัน หรือมีฝุ่นมาก ในตำแหน่งที่ได้รับแสงแดดหรือน้ำ (น้ำฝน) โดยตรง

ห้ามติดตั้งอุปกรณ์นี้ในตำแหน่งที่มีอุณหภูมิต่ำ

- น้ำที่แข็งตัวจะทำให้ท่อต่างๆ ระเบิด

ห้ามใช้เครื่องแปลงไฟฟ้า

- การทำเช่นนี้อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ห้ามใช้ปลั๊กไฟที่เสียหาย สายไฟ หรือเต้ารับไฟฟ้าที่เสียหาย หลวม

- การทำเช่นนี้อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ห้ามดึงหรือหักงอสายไฟมากเกินไป

ห้ามบิดหรือผูกสายไฟเป็นปม

อย่าเกี่ยวสายไฟไว้กับวัตถุที่เป็นโลหะ วางของหนักบนสายไฟ สอดสายไฟไว้ระหว่างสิ่งของ หรือดันสายไฟไว้ในช่องด้านหลังของอุปกรณ์

- การทำเช่นนี้อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 6 2015-01-21 11:07:09

ข้อควรระวังในการติดตั้ง

ข้อควรระวัง

อุปกรณ์นี้ควรอยู่ในตำแหน่งที่สามารถเอื้อมถึงปลั๊กไฟได้ง่าย

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้เนื่องจากไฟฟ้ารั่ว

คำเตือนที่สำคัญสำหรับการใช้งาน

คำเตือน

ถ้าอุปกรณ์มีน้ำท่วม ให้ตัดไฟฟ้าและการจ่ายน้ำทันที และติดต่อศูนย์บริการใกล้บ้าน

- ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต

ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการ Samsung ใกล้บ้าน

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

ถ้ามีก๊าซรั่ว (เช่น ก๊าซโพรเพน ก๊าซหุงต้ม ฯลฯ) ให้ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ ห้ามสัมผัสกับอุปกรณ์หรือสายไฟ

- ห้ามใช้พัดลมไฟฟ้า
- อาจเกิดประกายไฟที่ทำให้ระเบิดหรือเพลิงไหม้

อย่าให้เด็กเล่นบนเครื่องซักผ้าหรือในเครื่องซักผ้า นอกจากนี้ เมื่อทิ้งอุปกรณ์ ให้ถอดฝาปิดออก

- ถ้าติดอยู่ภายใน เด็กอาจอาจหายใจไม่ออกจนกระทั่งเสียชีวิต

ห้ามซักผ้าที่เปื้อนน้ำมันเชื้อเพลิง น้ำมันก๊าด เบนซีน ทินเนอร์ แอลกอฮอล์ หรือสารไวไฟหรือสารระเหยชนิดต่างๆ

- อาจทำให้เกิดไฟฟ้าช็อต ไฟไหม้หรือระเบิดได้

ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก

- อาจทำให้เกิดไฟฟ้าช็อตได้

โปรดอย่าสอดมือหรือโลหะเข้าใต้เครื่องซักผ้าขณะที่เครื่องกำลังทำงาน

- อาจทำให้เกิดการบาดเจ็บได้

โปรดอย่าซ่อมแซม ถอดประกอบ หรือดัดแปลงเครื่องด้วยตนเอง

- ห้ามใช้ฟิวส์ (เช่น สายทองแดง ลวดโลหะ ฯลฯ) นอกเหนือจากฟิวส์มาตรฐาน
- เมื่ออุปกรณ์หรือสายไฟเสียหายและจำเป็นต้องซ่อมหรือเปลี่ยนใหม่ โปรดติดต่อศูนย์บริการใกล้บ้านคุณ
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ ปัญหากับผลิตภัณฑ์ หรือการบาดเจ็บ
- ในกรณีนี้ ผลิตภัณฑ์จะไม่ได้รับความคุ้มครองตามการรับประกันมาตรฐานที่มาจาก Samsung และ Samsung จะไม่มีส่วนรับผิดชอบต่อการทำงานผิดปกติหรือความเสียหายที่เกิดจากการดำเนินการดังกล่าว

ถอดปลั๊กไฟเมื่อไม่ได้ใช้อุปกรณ์เป็นเวลานาน หรือระหว่างพายุฝนฟ้าคะนอง

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 7 2015-01-21 11:07:09

ข้อมูลเกี่ยวกับความปลอดภัย

อย่าใส่มือลงในถังที่กำลังหมุนระหว่างรอบการปั่นหมาด

- อาจทำให้เกิดการบาดเจ็บได้ ถ้าเครื่องซักผ้าไม่หยุดหมุนภายใน 15 วินาทีหลังจากที่คุณเปิดฝา โปรดติดต่อศูนย์บริการลูกค้า Samsung ทันที

ข้อควรระวังในการใช้งาน

ข้อควรระวัง

เมื่อเครื่องซักผ้าเปื้อนสิ่งแปลกปลอมเช่น สารซักฟอก สิ่งสกปรก เศษอาหาร ฯลฯ ให้ถอดปลั๊กไฟและทำความสะอาดเครื่องด้วยผ้านุ่มชุบน้ำหมาดๆ

- มิฉะนั้นอาจทำให้ผลิตภัณฑ์เปลี่ยนสี เปลี่ยนรูป เสียหาย หรือเกิดสนิม

ผลิตภัณฑ์ที่คุณซื้อนี้ได้รับการออกแบบมาสำหรับใช้ในครัวเรือนเท่านั้น
การใช้เพื่อธุรกิจจะถือเป็นการใช้ผิดวัตถุประสงค์ ในกรณีนี้ ผลิตภัณฑ์จะไม่ได้รับความคุ้มครองตามการรับประกันมาตรฐานที่มาจาก Samsung และ Samsung จะไม่มีส่วนรับผิดชอบต่อการทำงานผิดปกติหรือความเสียหายที่เกิดจากการใช้ผิดวัตถุประสงค์ดังกล่าว

อย่ายืนบนอุปกรณ์หรือวางสิ่งของ (เช่น ผ้า เทียนที่จุดไฟแล้ว บุหรี่ที่ติดไฟ จาน สารเคมี วัตถุที่เป็นโลหะ ฯลฯ) บนอุปกรณ์

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ หรือปัญหากับผลิตภัณฑ์

อย่ากดปุ่มต่างๆ ด้วยของแหลม เช่น หมุด มีด เล็บ ฯลฯ

- อาจทำให้เกิดไฟฟ้าช็อตหรือบาดเจ็บได้

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 8 2015-01-21 11:07:09

คำเตือนที่สำคัญสำหรับการทำความสะอาด

⚠ คำเตือน

ห้ามทำความสะอาดอุปกรณ์ โดยฉีดน้ำใส่ตัวเครื่องโดยตรง

ห้ามใช้สารทำความสะอาดที่เป็นกรดรุนแรง

ก่อนที่จะทำความสะอาดหรือดูแลรักษาเครื่อง โปรดถอดปลั๊กของเครื่องออกจากแหล่งจ่ายไฟ หรือปิดเครื่องที่ปุ่มเปิด/ปิด

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 9 2015-01-21 11:07:09

การติดตั้ง

โปรดดำเนินการตามคำแนะนำเหล่านี้ด้วยความรอบคอบเพื่อให้แน่ใจว่าสามารถติดตั้งเครื่องซักผ้าได้อย่างถูกต้องและเพื่อป้องกันอุบัติเหตุเมื่อเริ่มซักผ้า

มีชิ้นส่วนใดบ้าง

โปรดตรวจสอบว่าชิ้นส่วนทั้งหมดนี้อยู่ในบรรจุภัณฑ์ของผลิตภัณฑ์ ถ้าคุณพบปัญหากับเครื่องซักผ้าหรือชิ้นส่วน โปรดติดต่อศูนย์บริการลูกค้าของ Samsung ในพื้นที่หรือผู้ขายปลีก

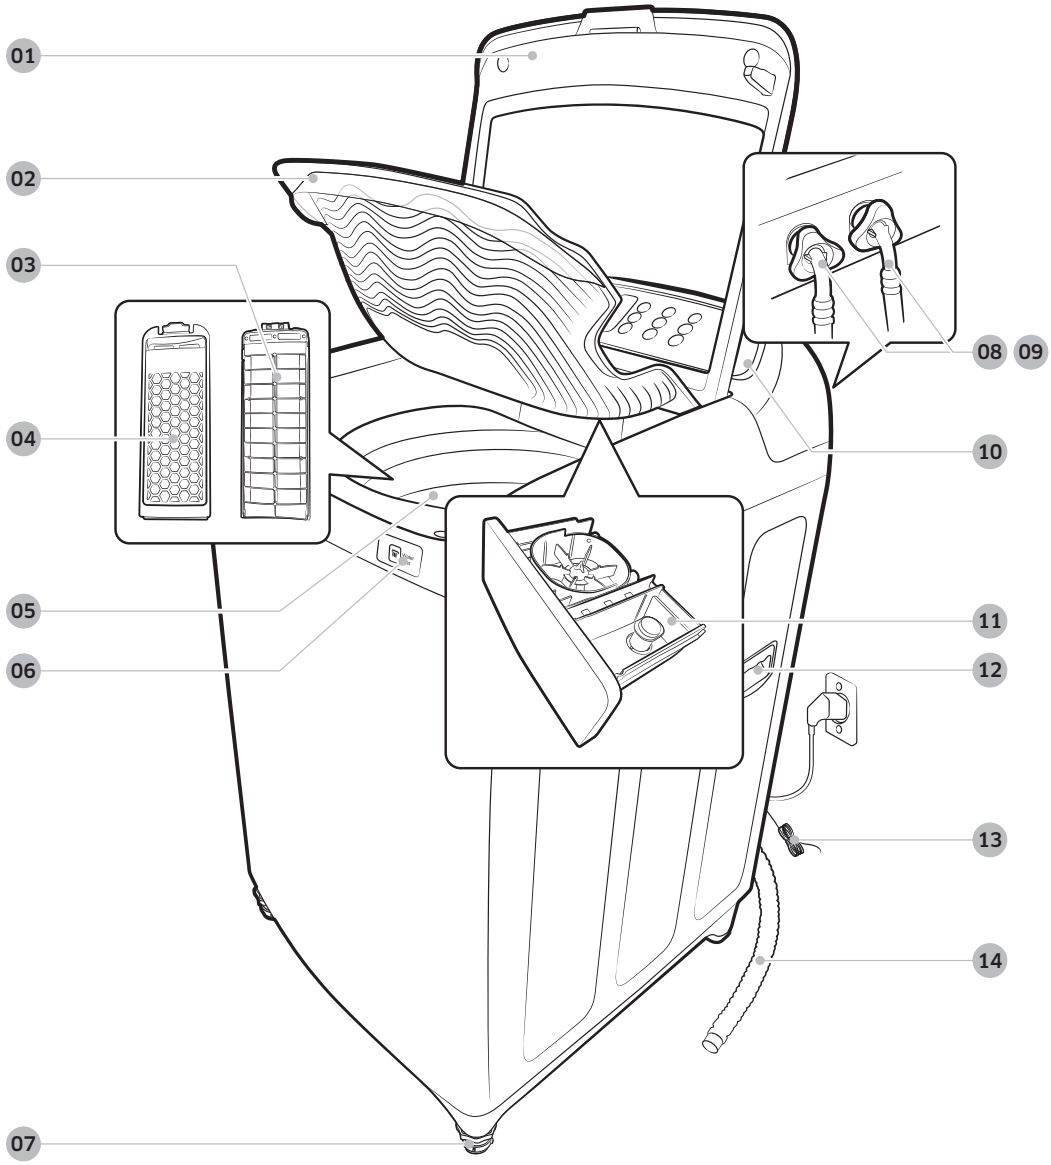

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 10 2015-01-21 11:07:10

01	ประตู	**02**	ซิงค์ในตัว	**03**	ตัวกรองเศษด้าย (ด้านหลัง)
04	ตัวกรองเศษด้าย (ด้านหน้า)	**05**	ถังซัก	**06**	Water Jet (ฉีดน้ำ)
07	ขาตั้งปรับระดับ	**08**	ท่อจ่ายน้ำ (เย็น)	**09**	ท่อจ่ายน้ำ (ร้อน)*
10	แผงควบคุม	**11**	ช่องใส่ผงซักฟอก	**12**	มือจับด้านข้าง *
13	สายลงกราวด์ *	**14**	ท่อน้ำทิ้ง		

หมายเหตุ

- ชิ้นส่วนที่มีเครื่องหมายดอกจัน (*) อาจมีหรือไม่มีให้ในบางรุ่น
- ประตู: โปรดปิดประตูไว้เสมอขณะที่เครื่องทำงาน
- ตัวกรองเศษด้าย: ทำหน้าที่เก็บเศษด้ายที่สะสมจากการซักผ้า
- สายลงกราวด์: หุ้มสายนี้ไว้ถ้ามีการเดินสายกับชิ้นส่วนโลหะเพื่อลงกราวด์
- ขาตั้งปรับระดับ: ปรับขาเพื่อให้เครื่องซักผ้าได้ระดับบนพื้นเรียบ

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 11 2015-01-21 11:07:10

การติดตั้ง

ข้อกำหนดในการติดตั้ง

คำเตือนเกี่ยวกับไฟฟ้าและการลงกราวด์

⚠ คำเตือน

- ต้องใช้ฟิวส์หรือเบรกเกอร์วงจร AC 220 V / 50 Hz
- โปรดใช้วงจรสาขาแยกสำหรับเครื่องซักผ้าโดยเฉพาะ
- ห้ามใช้สายไฟสำหรับต่อ
- ใช้สายไฟที่มากับเครื่องซักผ้าเท่านั้น
- ห้ามต่อสายกราวด์เข้ากับท่อพลาสติก ท่อก๊าซ หรือท่อน้ำร้อน

การปรับระดับ

- เพื่อป้องกันการสั่นหรือเสียงดัง โปรดติดตั้งเครื่องซักผ้าบนพื้นที่แน่นหนาและเรียบ โดยไม่มีแท่นรองหรืออิฐรอง
- จัดวางเครื่องซักผ้าห่างจากผนังด้านต่างๆ 10 ซม.

การจ่ายน้ำ

- โปรดตรวจสอบว่าก๊อกน้ำอยู่ในระยะที่เอื้อมถึงได้ง่าย
- ปิดก๊อกเมื่อไม่ได้ใช้งานเครื่องซักผ้า
- ตรวจสอบรอยรั่วที่ข้อต่อของท่อจ่ายน้ำเข้าเป็นประจำ

การระบายน้ำ

- ตรวจสอบว่าท่อระบายน้ำทิ้งไม่อุดตัน
- เราขอแนะนำให้ใช้ท่อตั้งที่มีความสูง 90-100 ซม. ท่อระบายน้ำต้องเชื่อมต่อผ่านคลิปท่อไปยังท่อตั้งดังกล่าว และท่อตั้งต้องครอบท่อระบายน้ำได้ทั้งหมด
  ข้อกำหนดสำหรับท่อตั้งที่ระบุในที่นี้ใช้เฉพาะรุ่นที่มีปั๊มเท่านั้น

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 12 2015-01-21 11:07:10

การติดตั้งแบบทีละขั้นตอน

ขั้นตอนที่ 1 เลือกตำแหน่ง

ข้อกำหนดของตำแหน่ง:

- มีพื้นผิวแข็ง ราบเรียบเสมอกัน โดยไม่มีพรมหรือวัสดุปูพื้นที่อาจปิดกั้นการระบายอากาศ
- พ้นจากแสงแดดโดยตรง
- มีพื้นที่ว่างสำหรับการระบายอากาศและการเดินสายอย่างเพียงพอ
- อุณหภูมิแวดล้อมต้องสูงกว่าจุดเยือกแข็ง (0 °C) อยู่เสมอ
- อยู่ห่างจากแหล่งกำเนิดความร้อนเสมอ

แผงกันหนู

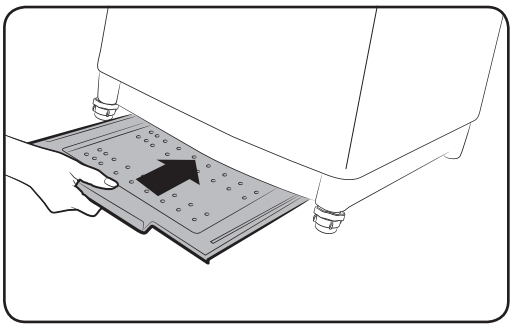

เครื่องซักผ้านี้มาพร้อมแผงกันหนูที่ช่วยป้องกันสัตว์เล็ก เช่น หนู ไม่ให้เข้าสู่ภายในตัวเครื่อง

ใส่แผงกันหนูที่ด้านล่างของเครื่อง เพื่อให้ทำงานได้ง่ายขึ้น โปรดยกด้านหน้าขึ้นเล็กน้อย

หมายเหตุ

- บางรุ่นมีแผงกันหนูที่ต้องใส่จากด้านหลังของเครื่อง สำหรับรุ่นนี้ โปรดใส่แผงกันหนูก่อนที่จะปรับระดับเครื่อง เพื่อให้ทำงานได้ง่ายขึ้น โปรดยกด้านหลังขึ้นเล็กน้อย
- แผงกันหนูนี้อาจมีหรือไม่มีให้สำหรับบางรุ่น

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 13 2015-01-21 11:07:10

การติดตั้ง

ขั้นตอนที่ 2 ปรับขาตั้งปรับระดับ

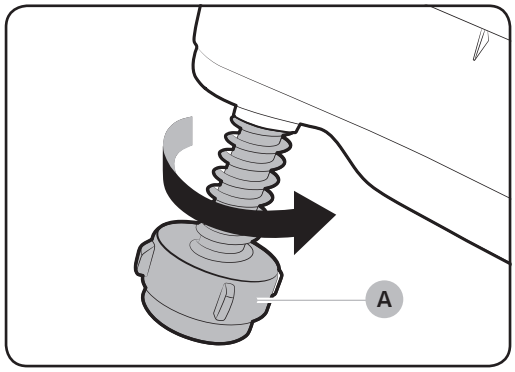

นำผลิตภัณฑ์ออกจากบรรจุภัณฑ์

1. ค่อยๆ เลื่อนเครื่องซักผ้าเข้าสู่ตำแหน่งที่ติดตั้ง การใช้แรงมากเกินไปอาจทำให้ **ขาตั้งปรับระดับ** เสียหาย
2. ปรับระดับเครื่องซักผ้าด้วยการปรับขาตั้งปรับระดับด้วยตนเอง

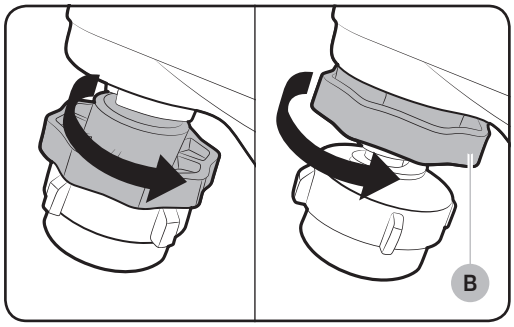

3. เมื่อปรับระดับเสร็จแล้ว ขัน **น็อต (B)** ถ้ามีให้ (บางรุ่นอาจไม่มีน็อตนี้)

คำเตือน

วัสดุบรรจุภัณฑ์อาจเป็นอันตรายกับเด็ก โปรดทิ้งวัสดุบรรจุภัณฑ์ทั้งหมด (ถุงพลาสติก โฟม เป็นต้น) ให้พ้นมือเด็ก

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 14 2015-01-21 11:07:10

ขั้นตอนที่ 3 เชื่อมต่อท่อน้ำ

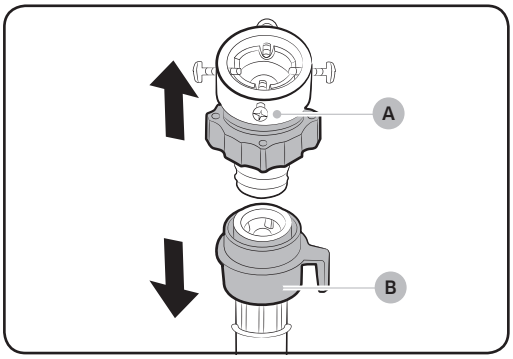

ต่อท่อจ่ายน้ำเข้ากับก๊อกน้ำ

1. ถอด **ข้อต่อตัวแปลง (A)** ออกจาก **ท่อน้ำ (B)**

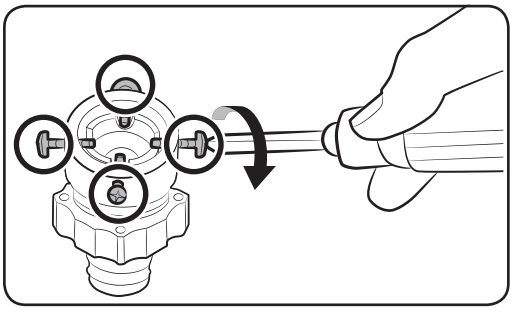

2. ใช้ไขควงฟิลลิปส์เพื่อคลายสกรูสี่ตัวบนข้อต่อ

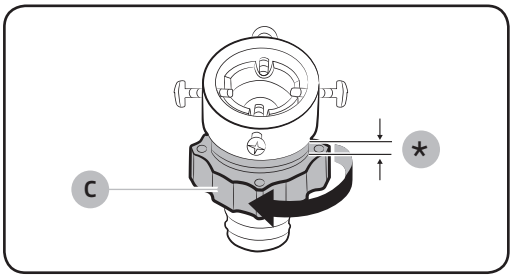

3. จับข้อต่อไว้และหมุน **ชิ้นส่วน (C)** ไปตามทิศทางของลูกศรเพื่อคลายออก 5 มม. (*)

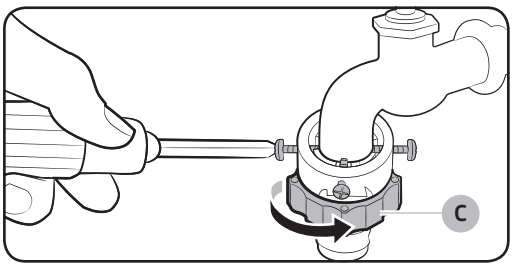

4. ต่อข้อต่อเข้ากับก๊อกน้ำ และขันสกรูให้แน่นพร้อมทั้งยกข้อต่อขึ้น
5. หมุน **ชิ้นส่วน (C)** ไปตามทิศทางของลูกศรเพื่อขันให้แน่น

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 15 2015-01-21 11:07:11

การติดตั้ง

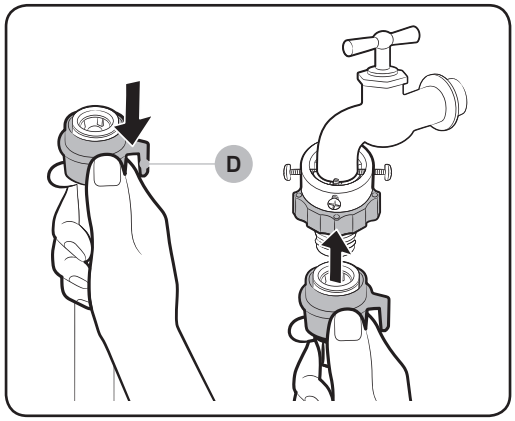

6. ในขณะจับด้านล่างของ **ชิ้นส่วน (D)** ไว้ ให้เชื่อมต่อท่อจ่ายน้ำเข้ากับข้อต่อ จากนั้น ปลด **ชิ้นส่วน (D)** ท่อจะต่อเข้ากับข้อต่อได้พอดีพร้อมกับมีเสียงคลิก

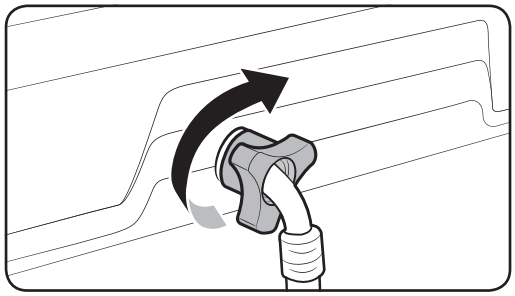

7. ต่อปลายอีกด้านของท่อน้ำเข้ากับวาล์วน้ำเข้าที่ด้านหลังของเครื่องซักผ้า หมุนท่อตามเข็มนาฬิกาเพื่อขันให้แน่น

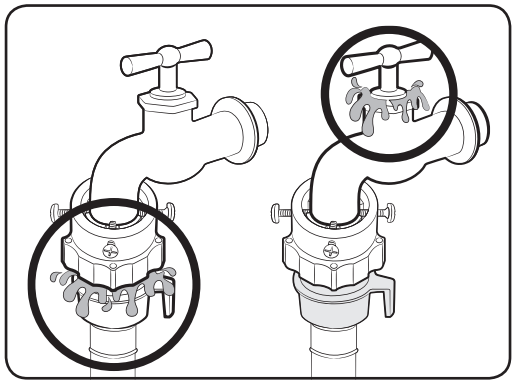

8. เปิดก๊อกน้ำและตรวจสอบว่ามีรอยรั่วรอบบริเวณเชื่อมต่อหรือไม่
   - ถ้ามีน้ำรั่ว ให้ทำตามขั้นตอนข้างต้นนี้ซ้ำ

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 16 2015-01-21 11:07:11

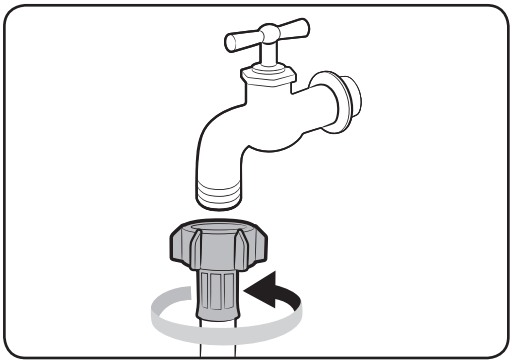

- หากก๊อกน้ำประเภทเกลียว ให้ต่อท่อน้ำเข้ากับก๊อกน้ำตามภาพ

คำเตือน

หยุดการใช้เครื่องซักผ้าถ้ามีน้ำรั่ว และติดต่อศูนย์บริการของ Samsung ในพื้นที่ มิฉะนั้นอาจทำให้เกิดไฟช็อต

ข้อควรระวัง

โปรดอย่าดึงท่อจ่ายน้ำจนตึงโดยใช้แรง หากท่อจ่ายน้ำสั้นเกินไป โปรดเปลี่ยนเป็นท่อแรงดันสูงที่ยาวขึ้น

หมายเหตุ

- หลังจากต่อท่อน้ำเข้ากับข้อต่อแล้ว ให้ตรวจสอบว่ามีการเชื่อมต่ออย่างถูกต้องหรือไม่ โดยดึงท่อจ่ายน้ำลง
- โปรดใช้ก๊อกน้ำแบบมาตรฐาน หากก๊อกน้ำเป็นแบบเหลี่ยมหรือใหญ่เกินไป ให้นำวงแหวนออกก่อนที่จะต่อก๊อกน้ำเข้ากับข้อต่อ

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 17 2015-01-21 11:07:11

การติดตั้ง

ขั้นตอนที่ 4 วางท่อทิ้งน้ำ

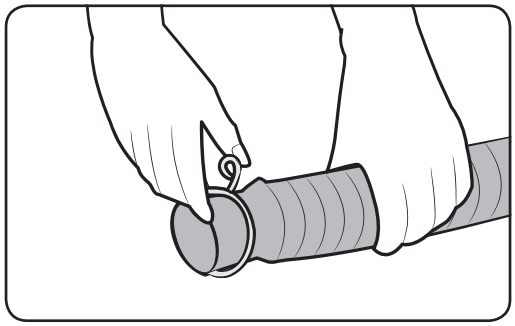

ประเภททั่วไป

1. กดวงแหวนข้อต่อค้างไว้ และใส่เข้ากับท่อทิ้งน้ำ

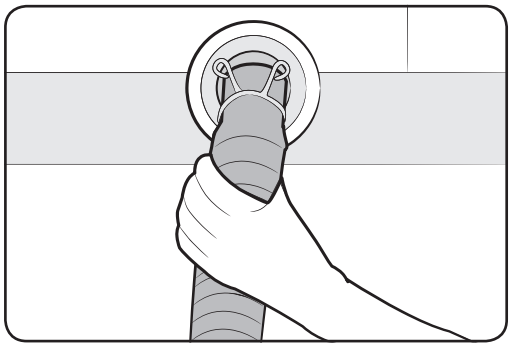

2. เชื่อมต่อท่อระบายน้ำเข้ากับช่องระบายน้ำ โปรดเชื่อมต่อให้แน่นหนาโดยใช้วงแหวนข้อต่อ
   ท่อระบายน้ำนี้สามารถขยายได้ ปรับความยาวของท่อระบายน้ำตามต้องการ

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 18 2015-01-21 11:07:12

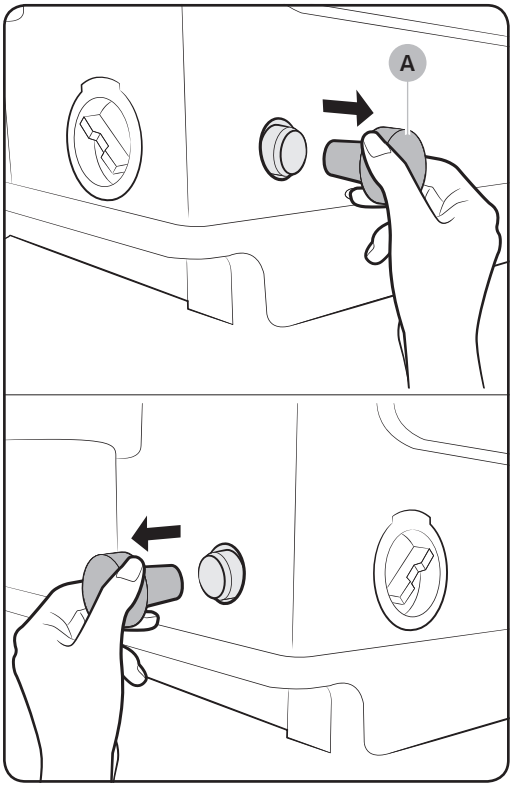

ประเภทปั๊ม

1. เปิด **ฝาปิดท่อ (A)** และใส่ท่อระบายน้ำ ยึดท่อระบายน้ำโดยใช้วงแหวนข้อต่อ

หมายเหตุ

- ตำแหน่ง (ด้านข้างหรือด้านหลัง) ของช่องระบายน้ำทิ้งขึ้นอยู่กับแต่ละรุ่น
- ฝาปิดท่อระบายน้ำนี้อาจมีหรือไม่มีให้สำหรับบางรุ่น

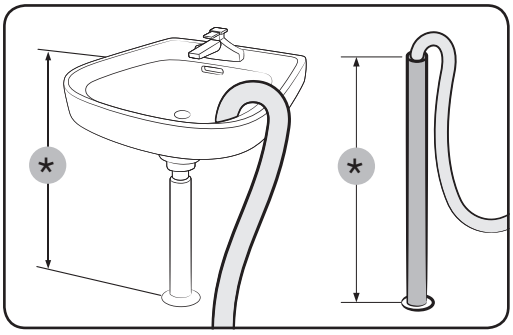

2. ต่อปลายของท่อระบายน้ำเข้ากับท่อตั้งหรืออ่างที่อยู่ในตำแหน่งสูง 90-100 ซม. (*) จากพื้น

คำเตือน

ตรวจสอบว่าปลายท่อระบายน้ำไม่จมอยู่ในน้ำ มิฉะนั้น เครื่องซักผ้าอาจเกิดความเสียหายร้ายแรง

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 19 2015-01-21 11:07:12

การติดตั้ง

ข้อควรระวัง

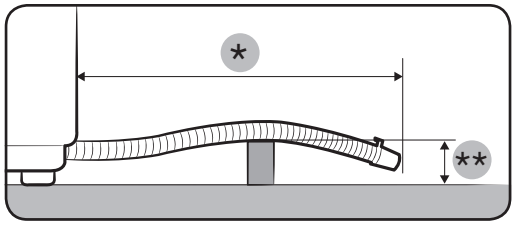

- อย่าต่อท่อให้มีความยาวเกิน **3 ม.** **(*)** โดยรวม
- อย่าให้ท่อระบายน้ำพาดผ่านกรอบประตูที่สูง **5 ซม. (**)** ขึ้นไปจากพื้น

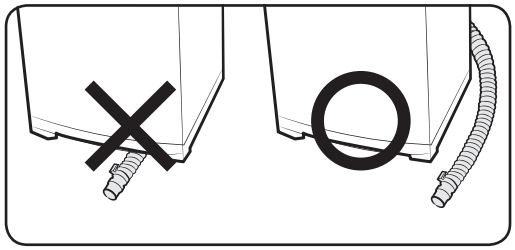

- อย่าพาดท่อระบายน้ำผ่านด้านใต้ของเครื่องซักผ้า

ขั้นตอนที่ 5 เปิดเครื่อง

ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนัง ซึ่งมีเต้ารับไฟฟ้า AC 220 V / 50 Hz ที่ผ่านการรับรองและมีการป้องกันด้วยฟิวส์หรือเบรกเกอร์วงจร จากนั้นให้กดปุ่ม **POWER** (เปิด/ปิด) เพื่อเปิดเครื่องซักผ้า

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 20 2015-01-21 11:07:12

ก่อนการเริ่มต้น

พื้นฐาน

ซักล่วงหน้า (ฉีดน้ำและซิงค์ในตัว)

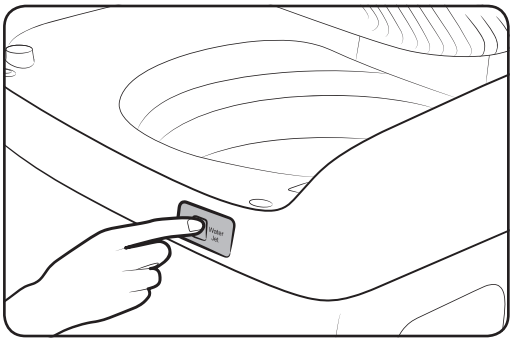

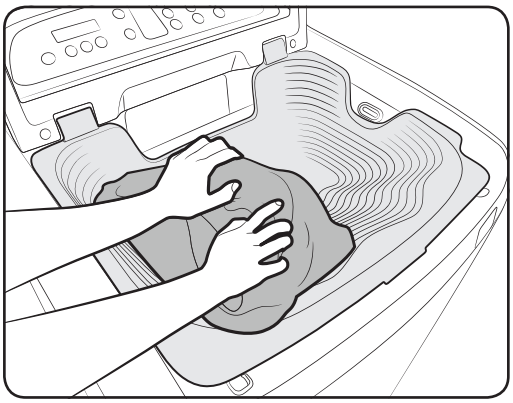

คุณสมบัติฉีดน้ำและซิงค์ในตัวช่วยให้คุณซักผ้าด้วยมือก่อนที่เครื่องซักผ้าจะเริ่มต้นการทำงาน คุณสมบัติฉีดน้ำใช้ได้เฉพาะเมื่อประตูเปิดอยู่ และตั้งค่าระดับน้ำไว้ต่ำกว่าระดับสูง สำหรับการซักล่วงหน้า ให้ใช้ซิงค์ในตัวที่ออกแบบมาเพื่อให้ความสะดวกในการซักมือ

1. ขณะที่ประตูเปิดอยู่ ให้ลดซิงค์ในตัวลง และใส่ผ้าเพื่อใช้ซักล่วงหน้า
2. กด **Water Jet** (ฉีดน้ำ) เพื่อจ่ายน้ำเข้าสู่ซิงค์ในตัว และซักด้วยมือ
3. เมื่อเสร็จแล้ว คุณสามารถนำน้ำกลับมาใช้ซ้ำในโปรแกรมหลัก หรือระบายน้ำออกได้
   - ในการใช้น้ำซ้ำ ให้เทน้ำลงในถังซักด้วยตนเอง
   - ในการระบายน้ำทิ้ง ให้กด **Drain** (ระบายน้ำออก) ระบายน้ำ

หมายเหตุ

- ถ้าต้องการซักผ้าด้วยมือขณะที่เครื่องทำงาน ให้กด **START/PAUSE** (เริ่ม/พัก) เพื่อหยุดการทำงาน และทำตามขั้นตอน 1- 3 ข้างต้น
- ถ้าคุณเปิดทั้งประตูและซิงค์ในตัว ให้ลดระดับซิงค์ในตัวลงด้วยตนเองเพื่อซักล่วงหน้า

ข้อควรระวัง

- โปรดอย่าใช้การฉีดน้ำผิดวัตถุประสงค์ การใช้คุณสมบัติการฉีดน้ำมากเกินไปจะเพิ่มปริมาณการใช้น้ำ
- เมื่อเปิดน้ำเข้าสู่ถังซัก โปรดเปิดน้ำอ่อนๆ มิฉะนั้นอาจทำให้น้ำสันออกจากถังซัก

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 21 2015-01-21 11:07:12

ก่อนการเริ่มต้น

ช่องใส่ผงซักฟอก

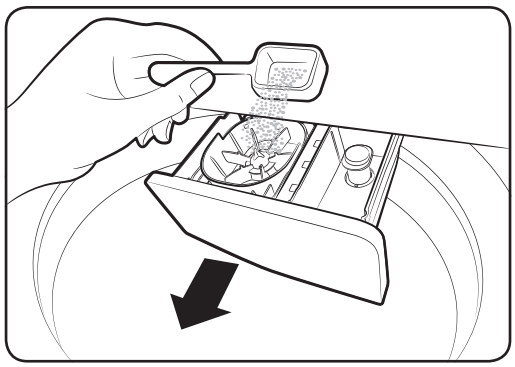

ในการเติมผงซักฟอกเฉพาะสำหรับผ้าบางประเภท ให้ทำตามขั้นตอนเหล่านี้:

1. เปิดประตู จากนั้นเปิดชิงค์ในตัวให้เห็นถังซัก
2. หาช่องใส่ผงซักฟอก จากนั้นเลื่อนเปิด
3. ใส่ผงซักฟอกตามที่ผู้ผลิตแนะนำ อย่าใส่เกินขีดสูงสุดตามเครื่องหมายที่ตัวจ่ายแบบปิก
4. ถ้าจำเป็น ให้ใส่น้ำยาปรับผ้านุ่มตามที่เหมาะสม อย่าใส่เกินขีดสูงสุดตามเครื่องหมายที่ตัวกั้นน้ำยาปรับผ้านุ่ม

ข้อควรระวัง

โปรดใช้ผงซักฟอกประเภทที่เหมาะสม การใช้ผงซักฟอกมากเกินไปอาจทำให้ผงซักฟอกไม่ละลาย

ล็อคป้องกันเด็ก

การล็อคป้องกันเด็กจะป้องกันไม่ให้เกิดอุบัติเหตุต่อเด็กและทารก เช่น การจมน้ำ

1. กด **POWER** (เปิด/ปิด)
2. ในการเปิดใช้ฟังก์ชันล็อคป้องกันเด็ก ให้กดปุ่ม **Rinse** (ล้างน้ำ) และ **Power Spin** (ปั่นหมาด) ค้างไว้พร้อมกันเป็นเวลา 3 วินาที สัญญาณจะกะพริบ
3. ในการปิดฟังก์ชันล็อคป้องกันเด็ก ให้กดปุ่ม **Rinse** (ล้างน้ำ) และ **Power Spin** (ปั่นหมาด) ค้างไว้พร้อมกันเป็นเวลา 3 วินาที สัญญาณจะดับลง ถ้าถังซักมีน้ำอยู่ ให้เริ่มต้นการทำงานของเครื่องอีกครั้ง และกดทั้งสองปุ่มค้างไว้พร้อมกันเป็นเวลา 3 วินาทีเพื่อปิดล็อคป้องกันเด็ก

ขณะที่ล็อคป้องกันเด็กทำงาน

- คุณยังสามารถใช้งานแผงควบคุมขณะที่ประตูปิด ถ้าคุณเปิดประตู รหัสข้อมูล (CL, dC) จะปรากฏพร้อมเสียงเตือน จากนั้น เครื่องจะเริ่มการบังคับระบายน้ำหลังจาก 30 วินาที เพื่อป้องกันไม่ให้เกิดอุบัติเหตุกับเด็กหรือทารก เช่น การจมน้ำ
- เมื่อการจ่ายน้ำสมบูรณ์ ล็อคป้องกันเด็กจึงจะเริ่มทำงาน
- ถ้าเปิดประตูทิ้งไว้เป็นเวลา 30 วินาทีขณะที่ถังซักมีน้ำ เครื่องจะระบายน้ำโดยมีรหัส “CL” ซึ่งคุณไม่สามารถหยุดได้
- หากต้องการเพิ่มผงซักฟอกหรือผ้าลงในถังซัก หรือเปลี่ยนการตั้งค่าโปรแกรม คุณต้องหยุดหรือปลดล็อคป้องกันเด็กก่อน

คำเตือน

ถ้าคุณเปิดประตูขณะที่ล็อคป้องกันเด็กทำงาน เครื่องจะบังคับระบายน้ำเพื่อป้องกันอุบัติเหตุ เช่น การจมน้ำ

หมายเหตุ

ล็อคป้องกันเด็กจะคงสถานะทำงานหลังจากที่คุณปิดเครื่องแล้ว คุณไม่สามารถปิดล็อคป้องกันเด็ก ถ้ารหัส “CL” ยังปรากฏบนจอ แต่คุณสามารถปิดล็อคได้เมื่อรหัส dC ปรากฏ โดยกดปุ่มทั้งสองค้างไว้พร้อมกัน

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 22 2015-01-21 11:07:12

ระบบตรวจสอบอัจฉริยะ

หากต้องการเปิดใช้งานฟังก์ชันนี้ ขั้นแรก คุณต้องดาวน์โหลด **Samsung Smart Washer** ที่ **Play Store** หรือ **Apple Store** และติดตั้งในอุปกรณ์เคลื่อนที่ซึ่งมีกล้อง

ฟังก์ชั่น Smart Check ได้รับการปรับให้มีประสิทธิภาพสูงสุดกับโทรศัพท์รุ่น Galaxy & iPhone (เฉพาะบางรุ่น)

1. กดปุ่ม **Wash** (ซัก) และ **Rinse** (ล้างน้ำ) พร้อมกันเป็นเวลา 3 วินาทีเพื่อเข้าสู่โหมด Smart Check
2. เครื่องซักผ้าจะเริ่มกระบวนการวินิจฉัยด้วยตนเอง และแสดงรหัสข้อผิดพลาดถ้าพบปัญหา
3. เรียกใช้แอปพลิเคชั่น **Samsung Smart Washer** ในอุปกรณ์เคลื่อนที่ และแตะ **Smart Check**
4. ถืออุปกรณ์เคลื่อนที่ใกล้กับแผงจอแสดงผลของเครื่องซักผ้า โดยหันด้านหน้าของอุปกรณ์เคลื่อนที่เข้าหาเครื่องซักผ้า จากนั้น แอปพลิเคชั่นจะรับรู้รหัสข้อผิดพลาดโดยอัตโนมัติ
5. เมื่อรับรู้รหัสข้อผิดพลาดได้อย่างถูกต้อง แอปพลิเคชั่นจะแสดงข้อมูลโดยละเอียดสำหรับข้อผิดพลาด พร้อมกับวิธีการดำเนินการต่อไป

หมายเหตุ

- ชื่อฟังก์ชัน Smart Check อาจแตกต่างกันไปในแต่ละภาษา
- ถ้าเครื่องซักผ้ามีไฟสะท้อนบนจอแสดงผล แอปพลิเคชั่นอาจไม่สามารถรับรู้รหัสข้อผิดพลาด
- ถ้าแอปพลิเคชั่นไม่รับรู้รหัสของ Smart Check ติดต่อกัน ให้ป้อนรหัสข้อผิดพลาดด้วยตนเองลงในหน้าจอของแอปพลิเคชั่น

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 23 2015-01-21 11:07:13

ก่อนการเริ่มต้น

คำแนะนำของผ้า

จุดตรวจสอบ

- ตรวจสอบรอยเปื้อนหรือสิ่งสกปรก ชุบผงซักฟอกเล็กน้อยกับผ้าขนหนูสีขาว ใช้ผ้าขนหนูสีขาวขยี้กับผ้าสกปรกเพื่อย้ายให้สิ่งสกปรกหรือสีมาอยู่ที่ผ้าขนหนูสีขาว
- ก่อนที่จะซัก ใช้น้ำยาซักผ้าป้ายแขนเสื้อ คอปก สาบเสื้อ และกระเป๋า โดยใช้แปรงขัด
- ผ้าที่มีการอัดจีบซึ่งตัดเย็บจากผ้าขนสัตว์ต้องได้รับการดูและเป็นพิเศษด้วยการมัดไว้ด้วยกันก่อนซัก นำด้ายออกหลังจากที่การซักและการอบแห้งเสร็จสมบูรณ์

ข้อควรระวัง

- โปรดอย่าวางผ้าหรือวัตถุที่หนักมากในถังซัก
- อย่าวางเทียนหรือแหล่งความร้อนไว้ภายในหรือบนเครื่องซักผ้า
- ห้ามซักผ้าชนิดต่อไปนี้
  - เนคไท เสื้อชั้นใน เสื้อแจ็คเก็ต สูท และเสื้อโค้ท อาจเสียรูปเนื่องจากการหดหรือสีตกบนพื้นผิว ผ้าเหล่านี้ส่วนใหญ่ทำจากไนลอน โพลีโนสิก และ/หรือเส้นใยผสม
  - ผ้าที่ถักทอให้มีรอยยับ รอยนูน หรือมีเรชิน จะเปลี่ยนรูปได้ง่ายเมื่อแช่น้ำ
  - ผ้าที่สีตกง่าย ทำจากฝ้าย ขนสัตว์ ไหมย่น ชุดหนังและเครื่องตกแต่งตลอดจนเสื้อผ้าที่มีการตกแต่ง
  - ผ้ากันน้ำ (ชุดสกี ผ้าปิดผ้าอ้อม พรม ฯลฯ) อาจมีการดีดตัวหรือทำให้เกิดเสียงหรือการสั่นสะเทือนผิดปกติ ทำให้เกิดการบาดเจ็บหรือทำให้สิ่งของเสียหาย

ขั้นตอนที่ 1 - คัดแยก

แยกผ้าตามเกณฑ์ดังนี้:

- ฉลากดูแลผ้า: แยกผ้าเป็น ผ้าฝ้าย ผ้าเนื้อผสม ผ้าใยสังเคราะห์ ผ้าไหม ผ้าขนสัตว์ และเรยอน
- สี: แยกผ้าขาวออกจากผ้าสี
- ขนาด: การนำผ้าที่มีขนาดแตกต่างมารวมเข้าไว้ด้วยกันในถังซักจะช่วยเพิ่มประสิทธิภาพในการซัก
- ความบอบบาง: ปฏิบัติตามคำแนะนำในการดูแลผ้าแต่ละชนิดในฉลากการดูแลผ้าสำหรับผ้าที่ต้องมีการถนอม เช่น ผ้าขนสัตว์ล้วน ม่าน และผ้าไหม

หมายเหตุ

โปรดดูฉลากดูแลผ้าบนเสื้อผ้า และแยกเสื้อผ้าตามนั้นก่อนเริ่มต้นซัก

ขั้นตอนที่ 2 - นำสิ่งของออกจากกระเป๋าให้หมด

นำสิ่งของออกจากกระเป๋าของเสื้อผ้า และนำสิ่งสกปรกออก

- วัตถุที่เป็นโลหะ เช่น เหรียญ เข็มหมุด และหัวเข็มขัดบนเสื้อผ้าอาจทำให้ผ้าอื่นๆ และถังซักเสียหาย
- กลับผ้าที่มีกระดุมและเสื้อผ้าที่มีลายปักเอาด้านในออกมาด้านนอก
- ถ้าไม่รูดซิปกางเกงหรือแจ็คเก็ตปิดไว้ขณะซัก ถังซักอาจเสียหายได้
- โปรดรูดซิปปิดไว้
- เสื้อผ้าที่มีเชือกยาวอาจพันกับผ้าชิ้นอื่น โปรดมัดเชือกไว้ก่อนที่จะซักผ้า

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 24 2015-01-21 11:07:13

ขั้นตอนที่ 3 - ใช้ถุงใส่ผ้าสำหรับซัก

- ต้องใส่ชุดชั้นในสตรี (ซักน้ำได้) ลงในถุงใส่ผ้าสำหรับซัก ส่วนที่เป็นโลหะของชุดชั้นในสตรีอาจทำให้วัสดุแตกหักและทำความเสียหายแก่เสื้อผ้าได้
- ผ้าแคชเมียร์และผ้าที่มีความฟู และผ้าน้ำหนักเบา (เช่น ผ้าประดับลูกไม้ ชุดชั้นใน ถุงน่องไนล่อน ผ้าใยสังเคราะห์ เป็นต้น) อาจลอยขึ้น และทำให้ผ้าได้รับความเสียหาย และทำให้เครื่องซักผ้าเกิดปัญหาขึ้นได้ ใช้ตาข่ายสำหรับซักผ้าเพื่อซักแยกต่างหาก
- อย่าซักถุงใส่ผ้าเพียงอย่างเดียวโดยไม่มีผ้าอื่น เนื่องจากอาจทำให้เกิดการสั่นสะเทือนที่ทำให้เครื่องซักผ้าเคลื่อนที่และอาจทำให้ได้รับบาดเจ็บ

ขั้นตอนที่ 4 - แช่ผ้าก่อนซัก (ถ้าจำเป็น)

- สำหรับรอยเปื้อนที่ปกเสื้อ แขนเสื้อ สาบ และกระเป๋า ให้ทาน้ำยาซักผ้าและใช้แปรงขัดเบาๆ ก่อนซัก
- ใช้ผงซักฟอกและน้ำยาซักผ้า ห้ามใช้สบู่ เนื่องจากอาจมีการตกค้างในถังซักหลังจากซักเสร็จ
- ซักถุงเท้าสีขาว แขนเสื้อและคอปกเสื้อด้วยการแปรงด้วยผงซักฟอกเล็กน้อย

ขั้นตอนที่ 5 - พิจารณาปริมาณผ้าที่จะซัก

ห้ามใส่ผ้าเกินปริมาณที่กำหนด การใส่ผ้ามากเกินไปอาจทำให้เครื่องซักผ้าไม่สามารถซักได้อย่างเหมาะสม

หมายเหตุ

เมื่อซักชุดเครื่องนอนหรือผ้านวม เวลาในการซักอาจนานขึ้น และประสิทธิภาพในการปั่นหมาดจะลดลง สำหรับชุดเครื่องนอนหรือผ้าคลุมเตียง น้ำหนักที่แนะนำคือไม่เกิน 3.5 กิโลกรัม

ข้อควรระวัง

ถ้าผ้าไม่สมดุล รหัสข้อมูล "**Ub**" จะปรากฏขึ้น ให้กระจายชิ้นผ้าให้เสมอกัน ผ้าที่ไม่สมดุลอาจลดประสิทธิภาพในการปั่น

ขั้นตอนที่ 6 - ใช้ประเภทผงซักฟอกที่เหมาะสม

ประเภทของผงซักฟอกขึ้นอยู่กับประเภทเนื้อผ้า (ผ้าฝ้าย ผ้าใยสังเคราะห์ ผ้าบาง ขนสัตว์) สี อุณหภูมิที่ซัก และระดับความสกปรก โปรดใช้ผงซักฟอกชนิด "ฟองน้อย" ซึ่งได้รับการออกแบบสำหรับเครื่องซักผ้าอัตโนมัติ

ข้อควรระวัง

- ใช้ผงซักฟอกในปริมาณที่พอเหมาะ แม้ว่าจะใช้ผงซักฟอกปริมาณมาก ผลลัพธ์ของการซักจะไม่แตกต่างกันมากนัก แต่จะทำให้เสื้อผ้าเสียหาย เนื่องจากล้างไม่เพียงพอ
- น้ำยาฟอกขาวนั้นมีฤทธิ์เป็นด่างอย่างแรง ทำให้เกิดความเสียหายหรือสีของผ้าเพี้ยนไป
- ใช้รอบการล้างน้ำที่ยาวนานขึ้นหรือเพิ่มรอบการล้างน้ำเมื่อใช้ผงซักฟอกที่มีความเป็นไปได้ว่าจะตกค้างบนผ้ามาก และทำให้เกิดกลิ่นเหม็นหลังจากซักเสร็จ
- ถ้าใช้ผงซักฟอกมากเกินไป โดยเฉพาะเมื่อใช้น้ำเย็น ผงซักฟอกจะละลายไม่หมดและค้างอยู่บนเสื้อผ้า ท่อ หรือถังปั่น ทำให้เสื้อผ้าสกปรก
- ในกรณีที่ตั้งเวลาซัก โปรดอย่าใส่ผงซักฟอกในถังหรือในผ้าโดยตรง ผ้าอาจสีตก โปรดใช้ช่องใส่ผงซักฟอก
- เมื่อซักผ้าขนสัตว์โดยใช้โปรแกรมผ้าขนสัตว์ ให้ใช้น้ำยาซักผ้าที่มีสภาวะเป็นกลางเท่านั้นเพื่อป้องกันสีเพี้ยน

หมายเหตุ

- ปฏิบัติตามคำแนะนำของผู้ผลิตผงซักฟอก ตามน้ำหนักของผ้า ระดับความสกปรก และความกระด้างของน้ำในพื้นที่ของคุณ ถ้าคุณไม่แน่ใจเกี่ยวกับความกระด้างของน้ำ โปรดติดต่อผู้ให้บริการน้ำประปาในพื้นที่
- ห้ามใช้ผงซักฟอกที่ที่เกาะตัวหรือแข็ง ผงซักฟอกอาจค้างอยู่ในรอบการซักทำให้ช่องระบายน้ำอุดตัน

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 25 2015-01-21 11:07:13

การทำงาน

แผงควบคุม

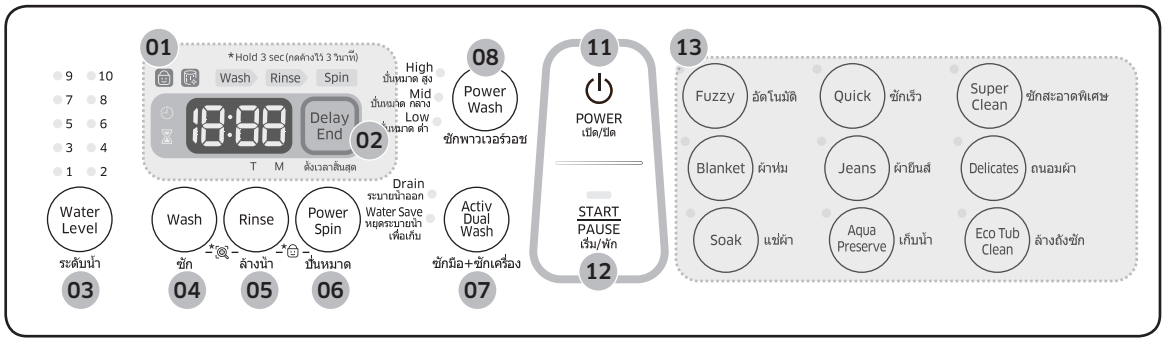

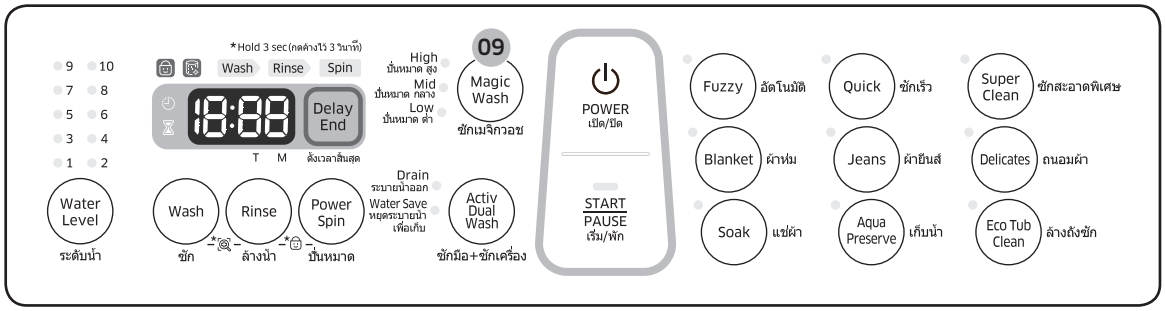

01	จอแสดงผล	แสดงเวลาที่เหลือของโปรแกรม หรือรหัสข้อมูลเมื่อเกิดปัญหา
02	Delay End (ตั้งเวลาสิ้นสุด)	กดปุ่มนี้เพื่อให้การซักสิ้นสุดในเวลาที่ระบุ ในการยกเลิกการตั้งเวลาซักล่วงหน้า ให้ปิดเครื่องซักผ้า คุณสามารถกำหนดเวลาสิ้นสุดไว้ล่วงหน้าได้สูงสุด 19 ชั่วโมง
03	Water Level (ระดับน้ำ)	ระดับน้ำจะถูกปรับให้เหมาะกับโปรแกรม แต่คุณสามารถเปลี่ยนระดับได้ด้วยตนเอง
04	Wash (ซัก)	กดเพื่อเริ่มต้นการซัก หรือปรับเวลาการซักระหว่าง 6 ถึง 30 นาที
05	Rinse (ล้างน้ำ)	กดเพื่อใช้รอบการล้างน้ำ หรือเปลี่ยนจำนวนครั้งในการล้างน้ำได้ถึง 5 รอบ
06	Power Spin (ปั่นหมาด)	กดเพื่อใช้รอบการปั่นหมาด หรือเปลี่ยนเวลาปั่นหมาดตามลำดับต่อไปนี้ 1-9 นาที (เพิ่มครั้งละ 1 นาที) > 15 นาที > 30 นาที
07	Activ Dual Wash (ซักมือ+ซักเครื่อง)	ปุ่มนี้มีสองตัวเลือก และสามารถใช้ได้เฉพาะเมื่อเครื่องหยุดทำงานหรืออยู่ในโหมดสแตนด์บาย • Water Save (หยุดระบายน้ำ-เพื่อเก็บ): เลือกเพื่อใช้น้ำในอ่างที่เหลืออยู่หลังจากที่ใช้การฉีดน้ำ น้ำจะถูกนำไปใช้สำหรับรอบการซักหลัก • Drain (ระบายน้ำออก): เลือกเพื่อระบายน้ำในอ่างที่เหลืออยู่ทิ้งหลังจากที่ใช้การฉีดน้ำ หลังจากระบายน้ำเสร็จ เครื่องซักผ้าจะเปลี่ยนเป็นโหมดหยุดระบายน้ำ เพื่อเก็บโดยอัตโนมัติ หลังจากนั้นคุณจะสามารถเลือกโปรแกรมได้

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 26 2015-01-21 11:07:13

08	Power Wash (ซักพาวเวอร์วอช)	Power Wash (ซักพาวเวอร์วอช) จะใช้มอเตอร์อินเวอร์เตอร์ดิจิตอลเพื่อปรับระดับการไหลเวียนของน้ำอย่างละเอียดสำหรับการซักและปั่นหมาด
09	Magic Wash (ซักเมจิกวอช)	การปรับพลังน้ำใช้ในการปรับระดับการไหลของน้ำสำหรับการซักและการปั่นหมาด มีตัวเลือกทั้งหมดสามแบบ: LOW (ต่ำ), MIDDLE (ปานกลาง) และ HIGH (สูง)
10	Power (เปิด/ปิด)	กดปุ่มนี้หนึ่งครั้งเพื่อเปิดเครื่อง และกดอีกครั้งเพื่อปิดเครื่อง
11	Start/Pause (เริ่ม/พัก)	กดเพื่อหยุดการทำงานหรือเพื่อให้เครื่องทำงานต่อ ในการเปลี่ยนลำดับของโปรแกรม กดหนึ่งครั้งเพื่อหยุดการทำงาน จากนั้นเปลี่ยนลำดับ ในการให้เครื่องทำงานต่อ ให้กดอีกครั้ง
12	แผงโปรแกรม	เลือกโปแรกรมที่เหมาะกับความต้องการ

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 27 2015-01-21 11:07:13

การทำงาน

ขั้นตอนง่าย ๆ ในการเริ่มต้น

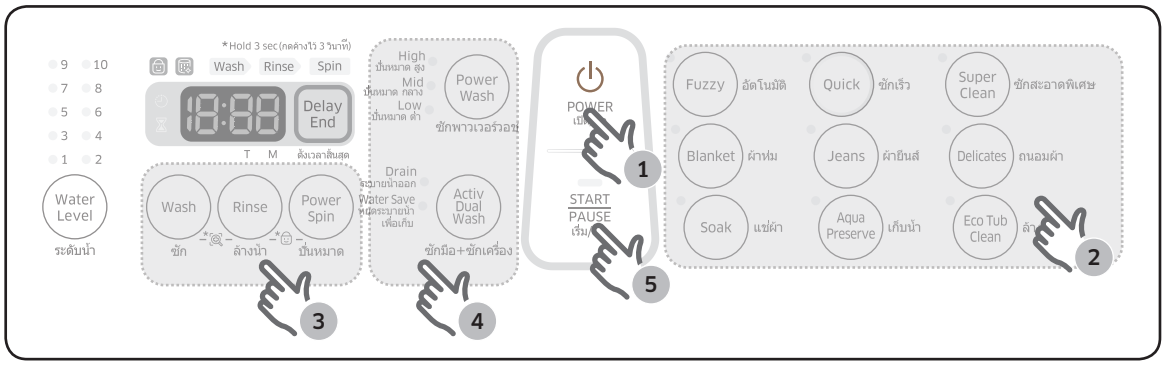

1. กดปุ่ม **POWER** (เปิด/ปิด) เพื่อเปิดเครื่องซักผ้า
2. เลือกโปรแกรมในแผงโปรแกรม
3. เปลี่ยนการตั้งค่าโปรแกรม (เวลาซัก, จำนวนรอบการล้างน้ำ และ/หรือเวลาปั่นหมาด) ตามต้องการ
4. ในการเพิ่มตัวเลือก เช่น **Power Wash** (เพิ่มประสิทธิภาพ), **Magic Wash** (ซักเมจิกวอช) และ **Activ Dual Wash** (ซักมือ+ซักเครื่อง) ให้กดปุ่มที่ต้องการ
5. กด **START/PAUSE** (เริ่ม/พัก)

ในการเปลี่ยนโปรแกรมระหว่างการทำงาน

1. กด **START/PAUSE** (เริ่ม/พัก) เพื่อหยุดการทำงาน
2. เลือกโปรแกรมอื่น และทำตามขั้นตอนที่ 2-3 ข้างต้นตามต้องการ
3. กด **START/PAUSE** (เริ่ม/พัก) เพื่อเริ่มต้นรอบการซักใหม่

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 28 2015-01-21 11:07:14

โปรแกรมอัตโนมัติ

โปรแกรม	คำอธิบาย
Fuzzy (อัตโนมัติ)	• เลือกตัวเลือกนี้สำหรับผ้าส่วนใหญ่ รวมถึงผ้าฝ้าย ผ้าซับใน และผ้าที่สกปรกปานกลาง
Quick (ซักเร็ว)	• เลือกตัวเลือกนี้สำหรับผ้าที่สกปรกน้อยและลดเวลาซัก
Super Clean (ซักสะอาดพิเศษ)	• เลือกตัวเลือกนี้ถ้าต้องการประสิทธิภาพการซักสูงพิเศษ
Blanket (ผ้าห่ม)	• ใช้โปรแกรมนี้สำหรับผ้าชิ้นใหญ่เช่นผ้าห่มและผ้าปูที่นอน
Jeans (ผ้ายีนส์)	• เหมาะสำหรับผ้าที่ต้องมีการซักสะอาด
Delicates (ถนอมผ้า)	• เลือกโปรแกรมนี้สำหรับผ้าที่ต้องถนอม เช่น สเว็ตเตอร์ เสื้อไหมพรม หรือผ้าขนสัตว์
Soak (แช่ผ้า)	• เมื่อเลือกตัวเลือกนี้ เครื่องจะเพิ่มกระบวนการแช่ผ้าก่อนโปรแกรมหลัก
Aqua Preserve (เก็บน้ำ)	• ใช้ตัวเลือกนี้เมื่อต้องการเก็บน้ำไว้ใช้ น้ำที่ใช้ในกระบวนการล้างน้ำจะถูกใช้ซ้ำในกระบวนการถัดไป
Eco Tub Clean (ล้างถังซัก)	• ใช้โปรแกรมนี้เพื่อล้างถังซัก การหมุนที่ทรงพลังจะขจัดความสกปรกและกลิ่นอับจากภายในถังซัก • ถ้าคุณเห็นสัญญาณ กะพริบ แสดงว่าเครื่องแนะนำให้ทำความสะอาดถังซักด้วยโปรแกรมล้างถังซัก สำหรับรายละเอียด โปรดอ่านหัวข้อการทำความสะอาดในคู่มือนี้

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 29 2015-01-21 11:07:14

การทำงาน

โปรแกรมที่กำหนดเอง

คุณสามารถใช้โปรแกรมเดี่ยวเพื่อซักผ้าที่มีความสกปรกไม่มาก ตัวอย่างเช่น คุณสามารถกำหนดโปรแกรมซักเพียงหนึ่งรอบสำหรับชุดนอน

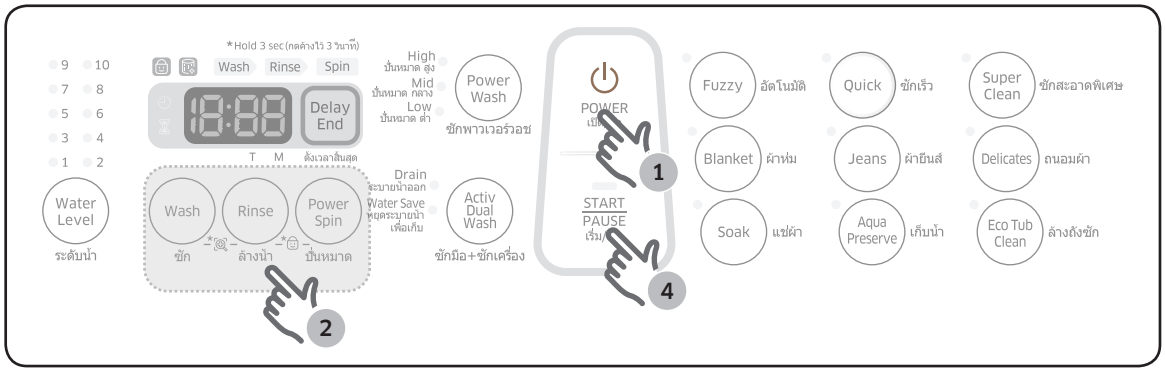

1. กดปุ่ม **POWER** (เปิด/ปิด) เพื่อเปิดเครื่องซักผ้า
2. กดปุ่ม **Wash** (ซัก)/**Rinse** (ล้างน้ำ)/**Power Spin** (ปั่นหมาด) เพื่อใช้แต่ละโปรแกรมตามต้องการ ระยะเวลาหรือจำนวนรอบของแต่ละโปรแกรมนั้นสามารถปรับได้ด้วยการกดปุ่มที่เหมาะสมตามจำนวนครั้งที่ต้องการ

เวลาซัก	จำนวนการล้างน้ำ	เวลาปั่นหมาด
6-30 นาที	1-5 ครั้ง	1-9, 15, 30 นาที

3. ถ้าต้องการใช้หลายโปรแกรมร่วมกัน ให้กดปุ่มโปรแกรมนั้นๆ ดังต่อไปนี้:

Wash (ซัก) **+ Rinse** (ล้างน้ำ)	**Rinse** (ล้างน้ำ) **+ Spin** (ปั่นหมาด)	**Wash** (ซัก) **+ Rinse** (ล้างน้ำ) **+ Power Spin** (ปั่นหมาด)
การล้างน้ำหลังจากซัก	การปั่นหมาดหลังจากล้างน้ำ	การซัก ล้างน้ำ และปั่นหมาดตามลำดับ

4. กด **START/PAUSE** (เริ่ม/พัก)

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 30 2015-01-21 11:07:14

การบำรุงรักษา

การทำความสะอาด

โปรดรักษาให้เครื่องซักผ้าสะอาดอยู่เสมอเพื่อป้องกันประสิทธิภาพลดลงและเพื่อให้มีอายุการใช้งานที่ยาวนาน

การเตือนของโปรแกรมล้างถังซัก

- สัญญาณ จะเตือนให้ทราบว่าจำเป็นต้องมีการล้างถังซักแล้ว ถ้าคุณเห็นสัญญาณนี้กะพริบหลังจากซักผ้าเสร็จ ให้นำผ้าออกและเรียกใช้โปรแกรมล้างถังซัก
- คุณสามารถข้ามการเตือนนี้ และใช้โปรแกรมต่างๆ ต่อไปตามปกติ เนื่องจากกรณีนี้ไม่ใช่การทำงานผิดปกติ แต่การเตือนจะยังคงอยู่อีก 6 รอบการทำงานติดต่อกันหลังจากที่จบการทำงานแต่ละรอบ
- การเตือนจะทำงานทุก 1-3 เดือน โดยขึ้นอยู่กับจำนวนรอบการทำงาน
- เพื่อให้ถังซักสะอาด ขอแนะนำให้ใช้โปรแกรมล้างถังซักเป็นประจำ

ชิงค์ในตัว

1. เปิดประตู และใช้ผ้าหรือฟองน้ำทำความสะอาดชิงค์ในตัว
2. กด **Water Jet** (ฉีดน้ำ) เพื่อจ่ายน้ำเข้าสู่ชิงค์ในตัว ใช้น้ำเพื่อล้างอ่างซัก

ตัวกรองเศษด้าย

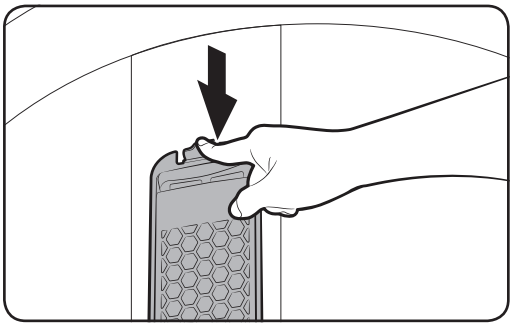

1. กดบริเวณด้านบนของที่ปิดตัวกรองเพื่อนำออก
2. ปลดล็อคที่ฝาปิด และทำความสะอาดตัวกรองด้วยน้ำไหลและใช้แปรงถู

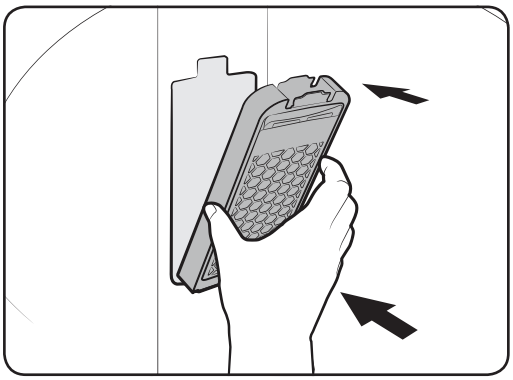

3. เมื่อทำความสะอาดเสร็จ ให้ปิดฝาและใส่กรอบของตัวกรองเข้าที่เดิม คุณจะได้ยินเสียงคลิกเมื่อกรอบของตัวกรองเข้าที่

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 31 2015-01-21 11:07:14

การบำรุงรักษา

ตัวกรองปั๊ม (เฉพาะรุ่นที่ใช้ได้เท่านั้น)

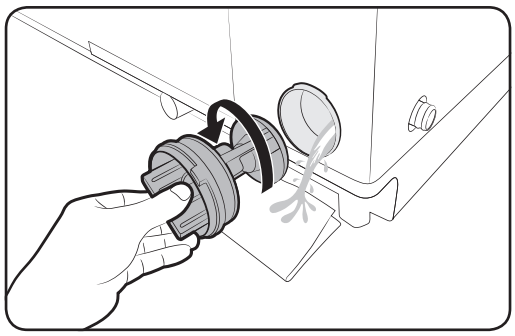

1. วางพรมหรือผ้าขนหนูถูพื้นใต้ตัวกรองปั๊ม หมุนปุ่มบิดของตัวกรองทวนเข็มนาฬิกาเพื่อถอดออก

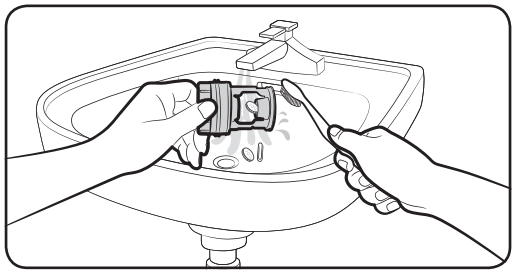

2. ทำความสะอาดตัวกรองในน้ำไหลและแปรงขนอ่อน

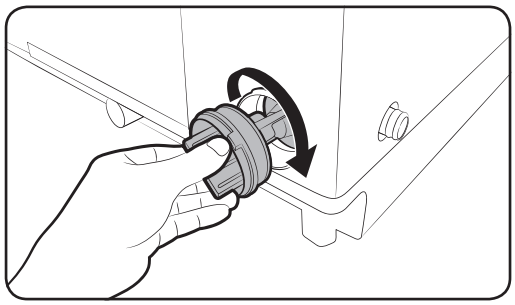

3. ใส่ตัวกรองกลับเข้าที่ และหมุนตามเข็มนาฬิกาจนล็อคเข้าที่

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 32 2015-01-21 11:07:14

ตะแกรงตัวกรอง

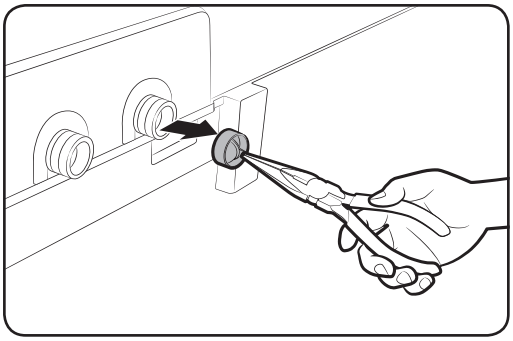

1. ใช้คีมเพื่อดึงตะแกรงตัวกรองออกจากช่องน้ำเข้าดังที่แสดงในภาพ
2. ใช้แปรงขนนุ่มทำความสะอาดตัวกรองในน้ำไหล

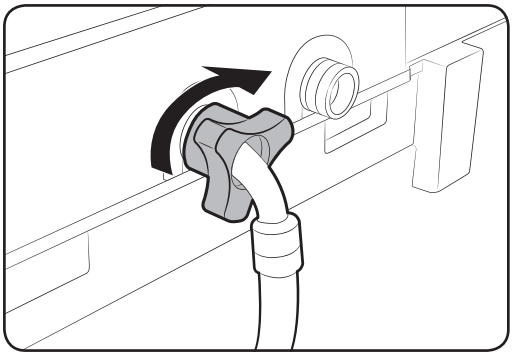

3. ใส่ตัวกรองเข้าที่ โปรดขันให้แน่นเพื่อป้องกันน้ำรั่ว

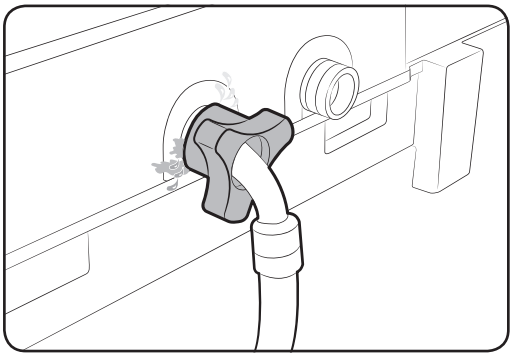

การใช้งานขั้นสูง

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 33 2015-01-21 11:07:15

การบำรุงรักษา

ช่องใส่ผงซักฟอก

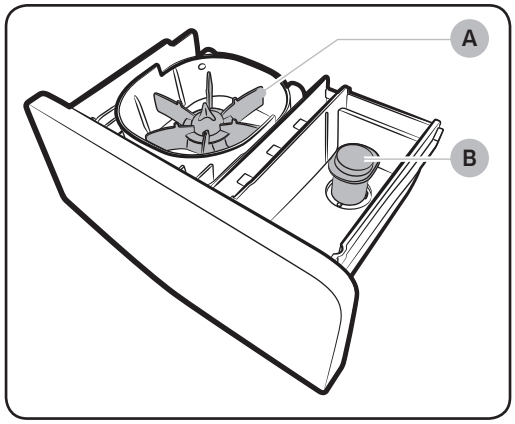

1. เปิดประตู จากนั้นเปิดซิงค์ในตัวให้เห็นช่องใส่ผงซักฟอก
2. ยกขอบด้านหน้าของช่องใส่ขึ้นเล็กน้อย จากนั้นเลื่อนเปิด
3. นำ **ตัวจ่ายแบบปีก (A)** และ **ที่กั้นน้ำยาปรับผ้านุ่ม (B)** ออกจากช่องใส่

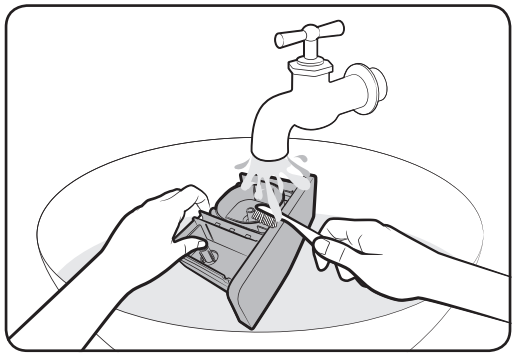

4. ทำความสะอาดช่องใส่ ตลอดจนตัวจ่ายและที่กั้นด้วยน้ำไหล และใช้แปรงขนนุ่ม

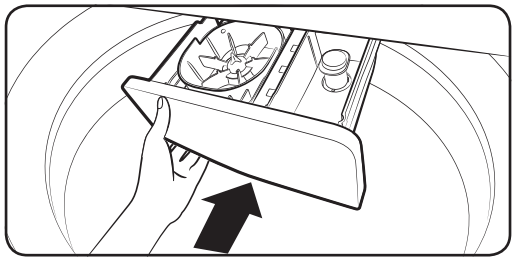

5. เมื่อเสร็จแล้ว ให้ใส่ที่กั้นน้ำยาปรับผ้านุ่มและใส่ตัวจ่าย จากนั้นใส่ช่องใส่ผงซักฟอกกลับเข้าที่

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 34 2015-01-21 11:07:15

การแก้ไขปัญหา

จุดตรวจสอบ

ถ้าคุณพบว่าเกิดปัญหากับเครื่องซักผ้า โปรดตรวจสอบที่ตารางด้านล่างนี้ก่อนและลองดำเนินการตามคำแนะนำ

ปัญหา	การดำเนินการ
เครื่องไม่เปิดทำงาน	• ตรวจสอบว่ามีการจ่ายพลังงานตามพิกัดที่ถูกต้องสำหรับผลิตภัณฑ์ • ตรวจสอบว่าเสียบปลั๊กเรียบร้อย • ตรวจสอบฟิวส์หรือเบรกเกอร์วงจร
เครื่องไม่เริ่มทำงาน	• ตรวจสอบว่าประตูปิดอยู่ • ตรวจสอบว่าก๊อกน้ำเปิดอยู่ • โปรดกดหรือแตะ **START/PAUSE** (เริ่ม/พัก) เพื่อเริ่มการทำงานของเครื่อง • ตรวจสอบว่าไม่ได้เปิดใช้การล็อคป้องกันเด็กไว้ • ก่อนที่เครื่องซักผ้าจะเริ่มเติมน้ำ จะมีเสียงคลิกๆ ดังเพื่อตรวจสอบประตูและดำเนินการระบายน้ำอย่างรวดเร็ว • ประตูเปิดอยู่ระหว่างรอบการปั่นหมาดหรือไม่ ปิดประตู จากนั้นกดปุ่ม **START/PAUSE** (เริ่ม/พัก) เพื่อให้เครื่องทำงานต่อ • เครื่องเข้าสู่โหมดสแตนด์บายหรืออยู่ในโปรแกรมแช่ผ้า โปรดรอสักครู่ • ตรวจสอบฟิวส์หรือเบรกเกอร์วงจร
เครื่องไม่จ่ายน้ำ	• โปรดกดหรือแตะ **START/PAUSE** (เริ่ม/พัก) หลังจากเลือกการจ่ายน้ำ • ตรวจสอบว่าก๊อกน้ำเปิดอยู่ • ตะแกรงตัวกรองที่ข้อต่อท่อจ่ายน้ำมีสิ่งสกปรกอุดตันหรือไม่ ทำความสะอาดตัวกรอง โดยใช้แปรงสีฟันขัด • น้ำไม่ไหลหรือไม่ ถ้าน้ำไม่ไหล ให้ปิดก๊อกน้ำและปิดเครื่อง • จับให้ท่อจ่ายน้ำตรง • เปิดและปิดประตู จากนั้นกดปุ่ม **START/PAUSE** (เริ่ม/พัก) • หากแรงดันน้ำต่ำ เครื่องซักผ้าจะรอเป็นเวลานานขึ้น ก่อนที่จะเริ่มทำงาน • ถ้าระดับน้ำไม่สูงพอที่ต้องการ หรือต่ำกว่าที่คาดหมาย ให้ใช้ตัวเลือกระดับน้ำเพื่อปรับระดับน้ำ
หลังจากจบรอบการทำงาน มีผงซักฟอกหลงเหลือในช่องจ่าย	• ตรวจสอบว่าเครื่องซักผ้าต่อกับแหล่งจ่ายน้ำที่มีแรงดันเพียงพอ • ตรวจสอบว่าใส่ช่องใส่ผงซักฟอกอย่างถูกต้องแล้ว • นำช่องใส่ผงซักฟอกออกมาทำความสะอาด จากนั้นลองอีกครั้ง
มีการสั่นสะเทือนหรือเสียงมากผิดปกติ	• ตรวจสอบว่าเครื่องตั้งอยู่บนพื้นที่ซึ่งราบเสมอกัน ถ้าพื้นที่ไม่เรียบเสมอกัน ให้ใช้ขาตั้งปรับระดับเพื่อปรับระดับ • ตรวจสอบว่าเครื่องซักผ้าไม่ได้สัมผัสกับวัตถุอื่น • ตรวจสอบว่าปริมาณผ้าอยู่ในถังอย่างสมดุล • ตรวจสอบว่าผ้ากระจายอยู่ในถังอย่างสมดุล จัดให้ผ้ากระจายออก และเริ่มต้นใหม่ • ตรวจสอบว่าพื้นที่รอบๆ เครื่องซักผ้าไม่มีสิ่งของวางอยู่ • ระหว่างการทำงานจะมีเสียงหึ่งเป็นปกติ • มีสิ่งของ เช่น เหรียญ ทำให้เกิดเสียง นำสิ่งของออกจากเครื่องซักผ้าหลังจากการซักเสร็จสิ้น

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 35 2015-01-21 11:07:15

การแก้ไขปัญหา

ปัญหา	การดำเนินการ
หยุด	• ตรวจสอบว่าสายไฟต่อเข้ากับเต้ารับไฟฟ้าที่มีไฟฟ้า • ตรวจสอบฟิวส์หรือเบรกเกอร์วงจร • ปิดประตู และกดหรือแตะ **START/PAUSE** (เริ่ม/พัก) เพื่อเริ่มการทำงานของเครื่อง เพื่อความปลอดภัย เครื่องซักผ้าจะไม่ปั่นหมาดถ้าประตูไม่ปิดสนิท • ก่อนที่เครื่องซักผ้าจะเริ่มเติมน้ำ จะมีเสียงคลิกๆ ดังเพื่อตรวจสอบประตูและดำเนินการระบายน้ำอย่างรวดเร็ว • อาจมีการหยุดหรือแช่ผ้าในโปรแกรม รอสักครู่และเครื่องอาจเริ่มทำงานเอง • ตรวจสอบว่าตะแกรงตัวกรองของท่อน้ำไม่อุดตัน ทำความสะอาดตะแกรงนี้เป็นประจำ • ปัญหานี้เกิดขึ้นชั่วคราวเนื่องจากแรงดันไฟฟ้าต่ำ และจะหายไปเมื่อพลังงานไฟฟ้ากลับมาเป็นปกติ
เติมน้ำในอุณหภูมิที่ไม่ถูกต้อง	• เปิดก๊อกน้ำจนสุด • ตรวจสอบว่าการเลือกอุณหภูมิถูกต้อง • ตรวจสอบว่าท่อต่อกับก๊อกที่ถูกต้อง ล้างท่อน้ำ • ถอดสายและทำความสะอาดตัวกรอง ตัวกรองท่อน้ำอาจอุดตัน • ขณะที่เครื่องซักผ้าเติมน้ำ อุณหภูมิของน้ำอาจเปลี่ยนแปลงขณะที่คุณลักษณะการควบคุมอุณหภูมิอัตโนมัติตรวจสอบอุณหภูมิของน้ำที่ไหลเข้า ซึ่งเป็นอาการปกติ • ขณะที่เครื่องซักผ้าเติมน้ำ คุณอาจพบว่ามีเพียงน้ำร้อนหรือน้ำเย็นไหลผ่านช่องจ่ายผงซักฟอก เมื่อเลือกอุณหภูมิการซักแบบเย็นหรืออุ่น กรณีนี้เป็นการทำงานปกติของคุณลักษณะการควบคุมอุณหภูมิอัตโนมัติ เนื่องจากเครื่องซักผ้าจะกำหนดอุณหภูมิของน้ำ
ประตู (ฝาปิด) ล็อคและไม่สามารถเปิดได้	• ขณะที่เครื่องกำลังทำงาน ให้กดหรือแตะ **START/PAUSE** (เริ่ม/พัก) เพื่อหยุดการทำงานของเครื่อง • อาจใช้เวลาสักครู่ก่อนที่กลไกประตูจะปลดล็อค
ไม่ระบายน้ำและ/หรือปั่นหมาด	• ตรวจสอบฟิวส์หรือเบรกเกอร์วงจร • ตรวจสอบว่าระดับแรงดันไฟฟ้าเป็นปกติ • ตรวจสอบว่าเสียบปลั๊กเรียบร้อย • ตรวจสอบว่าท่อระบายน้ำทิ้งชี้ลง (เฉพาะรุ่นที่ระบายน้ำด้วยวิธีปกติ) • ตรวจสอบว่าท่อระบายน้ำทิ้งไม่อุดตัน • ตรวจสอบว่าท่อระบายน้ำทิ้งไม่หักงอ • ทำให้ท่อน้ำทิ้งตรง ถ้าไม่สามารถระบายน้ำตามปกติ โปรดติดต่อขอรับบริการ • ปิดประตู จากนั้นกดปุ่ม **START/PAUSE** (เริ่ม/พัก) เพื่อความปลอดภัย เครื่องซักผ้าจะไม่ปั่นหมาดถ้าประตูไม่ปิดสนิท
ผ้าเปียกเกินไปเมื่อสิ้นสุดโปรแกรม	• ใช้ความเร็วการปั่นหมาดสูงหรือสูงมาก (เฉพาะรุ่นที่ใช้ได้เท่านั้น) • ใช้ผงซักฟอกประสิทธิภาพสูง (HE) เพื่อลดการเกิดฟองล้น • ผ้ามีปริมาณน้อยเกินไป ผ้าน้อยเกินไป (ชิ้นหรือสองชิ้น) อาจทำให้เสียสมดุลและอาจไม่มีการปั่นหมาดอย่างเหมาะสม

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 36 2015-01-21 11:07:15

ปัญหา	การดำเนินการ
น้ำรั่ว	• ตรวจสอบว่าท่อมีการต่อแน่นหนา • ตรวจสอบว่าวัสดุยางของท่อจ่ายน้ำอยู่ในตำแหน่งที่ถูกต้อง หมุนให้แน่นอีกครั้ง • ตรวจสอบว่าปลายท่อระบายน้ำมีการต่อไว้อย่างถูกต้องและแน่นหนากับระบบระบายน้ำ • อย่าใส่ผ้ามากเกินไป • ใช้ผงซักฟอกประสิทธิภาพสูง (HE) เพื่อป้องกันการเกิดฟองล้น • ตรวจสอบว่าท่อจ่ายน้ำไม่บิดงอ • ถ้าแรงดันน้ำมากเกินไป น้ำอาจรั่วได้ ปิดก๊อกน้ำลงเล็กน้อย • ตรวจสอบว่าน้ำไม่ได้รั่วไหลจากก๊อกน้ำ ถ้ามีการรั่วไหล ให้ซ่อมก๊อกน้ำ
มีฟองล้น	• ใช้ผงซักฟอกประสิทธิภาพสูง (HE) เพื่อป้องกันการเกิดฟองล้น • ลดปริมาณผงซักฟอกสำหรับน้ำอ่อน ผ้าปริมาณน้อยหรือผ้าที่ไม่สกปรกมาก • ไม่แนะนำให้ใช้ผงซักฟอกที่ไม่ใช่แบบ HE
ถังปั่นหมาดหรือท่อระบายน้ำ/จ่ายน้ำเกาะตัวเป็นน้ำแข็ง	• ใช้น้ำอุ่นหรือถอดท่อจ่ายน้ำและท่อระบายน้ำออก นำไปแช่ในน้ำอุ่น • เติมน้ำอุ่นในถังปั่นหมาด จากนั้นรอประมาณ 10 นาที • วางผ้าชุบน้ำร้อนบนข้อต่อของท่อระบายน้ำทิ้ง • ต่อท่อจ่ายน้ำและท่อระบายน้ำกลับเข้าที่ จากนั้นตรวจสอบว่ามีการจ่ายน้ำอย่างถูกต้องแล้วหรือไม่
น้ำไหลออกจากถังทันที	• ตรวจสอบว่าท่อระบายน้ำไม่อุดตัน และแขวนไว้ด้วยตะขอเกี่ยวท่อระบายน้ำ ใส่น้ำในถังปั่นประมาณครึ่งถัง และลองปั่นอีกครั้ง • ยกปลายท่อน้ำทิ้งขึ้น เพื่อป้องกันไม่ให้น้ำไหลออก เติมน้ำในถังปั่นประมาณครึ่งถัง จากนั้นเปิดใช้การปั่นหมาดหลังจากปล่อยท่อระบายน้ำกลับที่เดิม • ตรวจสอบว่าได้ติดตั้งท่อระบายน้ำทิ้งอย่างถูกต้อง ดูหัวข้อการติดตั้งของคู่มือผู้ใช้ฉบับนี้ และปรับตำแหน่งของท่อระบายน้ำตามคำแนะนำ
มีรอยเปื้อนที่ผ้า	• ทำความสะอาดตัวกรองเมจิค
มีกลิ่นอับ	• ตะกอนผงซักฟอกที่ค้างอยู่มากเกินไปจะทำให้เกิดกลิ่นเหม็น • ใช้โปรแกรมทำความสะอาดเป็นประจำ • ทิ้งให้ภายในเครื่องซักผ้าแห้งหลังจากจบโปรแกรม

ถ้าปัญหาเหล่านี้ยังคงอยู่ โปรดติดต่อศูนย์บริการของ Samsung ในพื้นที่

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 37 2015-01-21 11:07:15

การแก้ไขปัญหา

รหัสข้อมูล

ถ้าเครื่องซักผ้าไม่ทำงาน คุณสามารถดูรหัสข้อมูลบนหน้าจอได้ โปรดตรวจสอบตารางด้านล่างและลองดำเนินการตามคำแนะนำ

รหัส	การดำเนินการ
1C	**เซนเซอร์ระดับน้ำไม่ทำงานอย่างถูกต้อง** • ตรวจสอบการยึดโยงสายของเซนเซอร์ระดับน้ำ • ถ้ายังคงมีรหัสข้อมูลปรากฏอยู่ โปรดติดต่อศูนย์บริการลูกค้า
3C	**ปัญหาของมอเตอร์** • ลองเริ่มต้นโปรแกรมใหม่ • ถ้าปัญหายังคงอยู่ โปรดติดต่อขอรับบริการ
4C	**เครื่องไม่จ่ายน้ำ** • ตรวจสอบว่าก๊อกน้ำเปิดอยู่ • ตรวจสอบว่าท่อน้ำไม่อุดตัน • ตรวจสอบว่าก๊อกน้ำไม่เกาะตัวเป็นน้ำแข็ง • ตรวจสอบว่าเครื่องซักผ้าต่อกับแหล่งจ่ายน้ำที่มีแรงดันเพียงพอ • ตรวจสอบว่าก๊อกน้ำเย็นและก๊อกน้ำร้อนมีการต่ออย่างถูกต้อง • ทำความสะอาดตะแกรงตัวกรองเมื่อมีการอุดตัน
4C2	• ตรวจสอบว่าท่อจ่ายน้ำเย็นต่อกับก๊อกน้ำเย็นอย่างแน่นหนา ถ้าต่ออยู่กับก๊อกน้ำร้อน ผ้าอาจเสียหายในบางโปรแกรมซัก
5C	**เครื่องไม่ระบายน้ำทิ้ง** • ตรวจสอบว่าท่อระบายน้ำทิ้งไม่เกาะเป็นน้ำแข็งหรืออุดตัน • ตรวจสอบว่าท่อระบายน้ำทิ้งอยู่ในตำแหน่งที่เหมาะสม ตามประเภทการเชื่อมต่อ • ทำความสะอาดตัวกรองเมื่อมีการอุดตัน • ตรวจสอบว่าท่อทิ้งน้ำเหยียดตรงตลอดเส้นทางไปยังระบบระบายน้ำ • ถ้ายังคงมีรหัสข้อมูลปรากฏอยู่ โปรดติดต่อศูนย์บริการลูกค้า
9C1	**ปัญหาการควบคุมอิเล็กทรอนิกส์ (ข้อผิดพลาดแรงดันไฟฟ้าเกิน)** • ตรวจสอบ PCB และการยึดโยงสาย • ตรวจสอบว่ามีการจ่ายไฟอย่างถูกต้อง • ถ้ายังคงมีรหัสข้อมูลปรากฏอยู่ โปรดติดต่อศูนย์บริการลูกค้า
9C2	**ตรวจพบแรงดันไฟฟ้าต่ำ** • ตรวจสอบว่าสายไฟเชื่อมต่ออย่างเหมาะสม • ถ้ายังคงมีรหัสข้อมูลปรากฏอยู่ โปรดติดต่อศูนย์บริการลูกค้า
AC6	**ปัญหาการสื่อสารของอินเวอร์เตอร์** • ตรวจสอบ PCB อินเวอร์เตอร์และการยึดโยงสาย • ถ้ายังคงมีรหัสข้อมูลปรากฏอยู่ โปรดติดต่อศูนย์บริการลูกค้า

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 38 2015-01-21 11:07:15

รหัส	การดำเนินการ
dC	**มีการใช้เครื่องซักผ้าขณะที่ประตูเปิดอยู่** • ตรวจสอบว่าประตูปิดเหมาะสมแล้ว • ตรวจสอบว่าผ้าไม่ได้ติดอยู่ที่ประตู
HC	**มีปัญหาในการควบคุมอุณหภูมิน้ำ (การควบคุมฮีทเตอร์)** • ถ้ายังคงมีรหัสข้อมูลปรากฏอยู่ โปรดติดต่อศูนย์บริการลูกค้า
LC	**ตรวจสอบท่อระบายน้ำ** • ตรวจสอบว่าปลายท่อน้ำทิ้งวางอยู่บนพื้นหรือไม่ • ตรวจสอบว่าท่อระบายน้ำทิ้งไม่อุดตัน • ถ้ายังคงมีรหัสข้อมูลปรากฏอยู่ โปรดติดต่อศูนย์บริการลูกค้า
OC	**น้ำล้น** • เริ่มต้นใหม่หลังจากปั่นหมาด • ถ้ารหัสข้อมูลยังคงปรากฏบนหน้าจอ โปรดติดต่อศูนย์บริการของ Samsung ในพื้นที่
PC	**เมื่อไม่สามารถตรวจหาตำแหน่งของคลัตช์** • ถ้ายังคงมีรหัสข้อมูลปรากฏอยู่ โปรดติดต่อศูนย์บริการลูกค้า
PC1	**หลังจากตรวจพบตำแหน่งของคลัตช์ ถ้าสัญญาณของห้องคลัตช์ผิดพลาด** • ถ้ายังคงมีรหัสข้อมูลปรากฏอยู่ โปรดติดต่อศูนย์บริการลูกค้า
Ub	**การปั่นหมาดไม่ทำงาน** • ตรวจสอบว่าผ้ากระจายตัวสม่ำเสมอ • ตรวจสอบว่าเครื่องตั้งอยู่บนพื้นที่เรียบและมั่นคง • ให้คลายผ้าที่พันกันออก หากมีการซักผ้าเพียงชิ้นเดียว เช่น เสื้อคลุมอาบน้ำหรือกางเกงยีนส์ การปั่นครั้งสุดท้ายอาจไม่ได้ผลดีเท่าที่ควร และข้อความตรวจสอบ **"Ub"** จะปรากฏในจอแสดงผล

ถ้ารหัสข้อมูลยังคงปรากฏบนหน้าจอ โปรดติดต่อศูนย์บริการของ Samsung ในพื้นที่

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 39 2015-01-21 11:07:15

ข้อมูลจำเพาะ

ข้อมูลจำเพาะ

ประเภท		เครื่องซักผ้าฝาบน		
		WA16J675***	WA15J675***	WA14J673***
น้ำหนักสูงสุด (กก.)	กำลังซัก	16.0	15.0	14.0
การใช้พลังงาน (W)	กำลังซัก	360 - 420		600
	รอบปั่น	300		350
ขนาด (มม.)		ก 630 x ล 690 x ส 1100		ก 630 x ล 690 x ส 1080
น้ำหนักสุทธิ (กก.)		49.0		
แรงดันน้ำ (Mpa (kg·f/cm^2))		0.05 - 0.78 (0.5 - 8.0)		
ประเภทการซัก		การหมุน		
ระดับน้ำ (L)	10	96		94
	8	81		79
	6	69		69
	4	59		59
	2	47		47
การใช้น้ำ (L)		177		174
ความเร็วปั่นหมาด (รอบต่อนาที)		720		700

หมายเหตุ

- เครื่องหมายดอกจัน (*) หมายถึงหมายเลขรุ่นย่อย และอาจแตกต่างกัน (0-9) หรือ (A-Z)
- ลักษณะและข้อมูลจำเพาะอาจมีการเปลี่ยนแปลงเพื่อปรับปรุงคุณภาพโดยไม่ได้แจ้งให้ทราบ

WA6700JS(PREMIUM)-03515A_TH_K_150120.indd 40 2015-01-21 11:07:15

บันทึก

บันทึก

บันทึก

ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th/support

DC68-03515A-00